



Manual de driver Windows

SAT38TUSE

Rev. 1.2

CONTENIDO

1. Información del manual	1
2. Ambiente de los sistemas operativos (OS)	1
3. Preparación del driver de Windows	1
4. Instalación del driver de Windows	2
5. Configuración detallada del driver de Windows	6
Preferencias de impresión	6
Otras configuraciones	36
6. Uninstall Windows Driver	40
7. Especificaciones	42



1. Información del manual

Este Manual de instalación del controlador de Windows proporciona información sobre la instalación, las especificaciones detalladas y el uso del controlador de Windows de la impresora, de acuerdo con el sistema operativo del PC(OS) . Mantenemos esfuerzos continuos para mejorar y actualizar las funciones y la calidad de todos nuestros productos. Las especificaciones del producto y/o el contenido de las instrucciones pueden cambiar sin previo aviso.

2. Ambiente de los sistemas operativos (OS)

Los siguientes sistemas operativos son soportados para su uso.

- Microsoft Windows 10 (32 bit/64 bit)
- Microsoft Windows 8 (32 bit/64 bit)
- Microsoft Windows 7 SPI (32 bit/64 bit)
- Microsoft Windows Vista SP2 (32 bit/64 bit)
- Microsoft Windows XP Professional SP3 (32 bit)
- Microsoft Windows Server 2012(64 bit)
- Microsoft Windows Server 2008 R2
- Microsoft Windows Server 2008 SP2(32 bit/64 bit)
- Microsoft Windows Server 2003 R2 SP2(32 bit/64 bit)

3. Preparación del driver de Windows

Este driver lo encontrará en el CD incluido.

El archive de instalación es SAT SAT38TUSE Printer Driver-V-X.X.X.exe


ej : SAT SAT38TUSE Printer Driver-v-2.1.0.1.exe

4.Instalación del driver de Windows


Advertencia:

Bajo diferentes sistemas operativos la pantalla puede tener ciertas diferencias. Por favor proceda acorde a los tips, Tome como ejemplo la instalación SAT38TUSE (Windows 7).


- (1) Doble click Windows Driver.
- (2) Seleccione el lenguaje, en este ejemplo “English” y de click en “OK”.

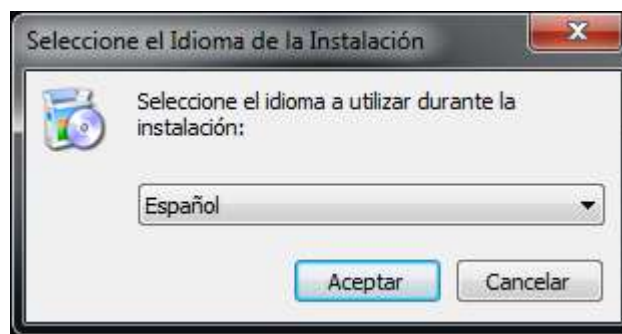


- (3) Click “Siguiente”.

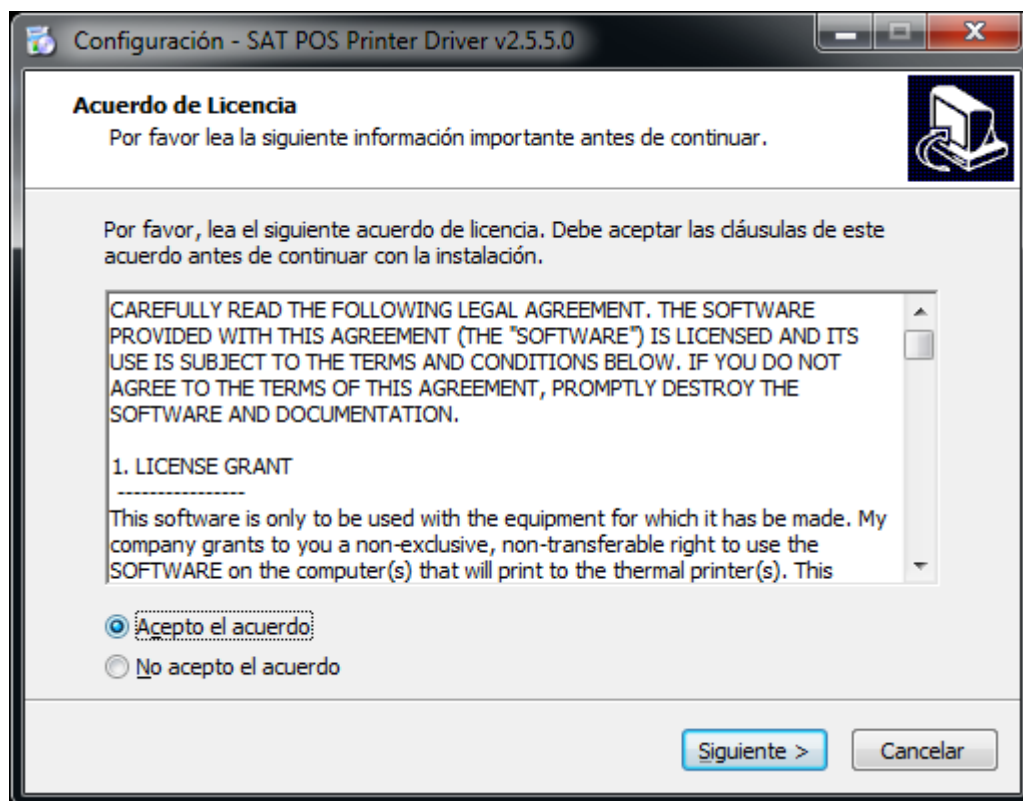

(5) Click "Siguiente"

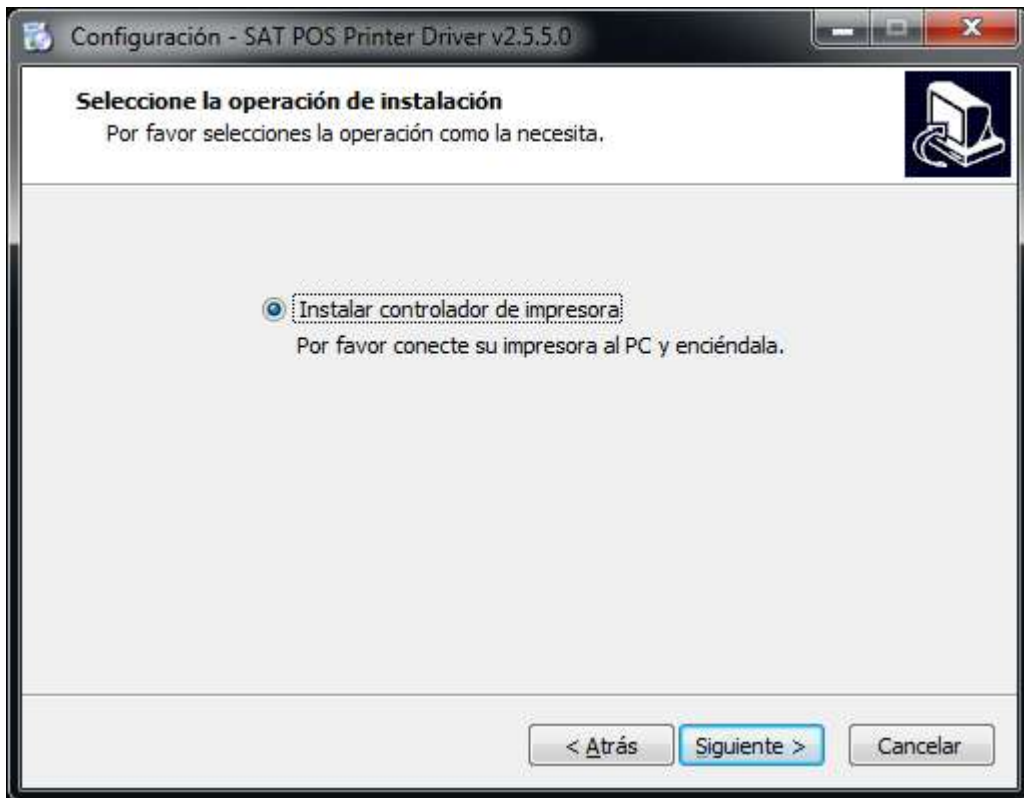

(6) Seleccione el tipo de Puerto (USBxxx es para Puerto USB, COMx es para puerto serial, LPTx es para puerto paralelo). Seleccione el tipo de driver, puerto, ejemplo “COM1” como puerto. Dé click en “Configurar Puerto”.

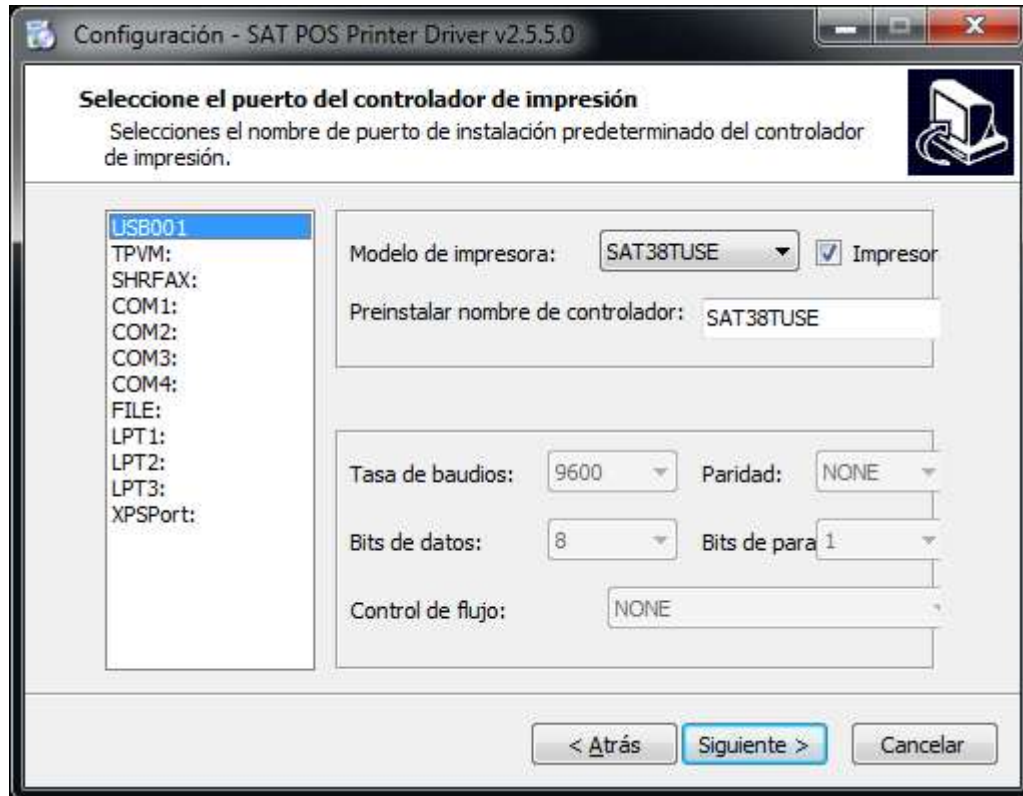

NOTE: If printer is already connected with computer by USB port, it only needs to click “Install”, then it will be installed automatically. Otherwise, proceed to the next step.

(7) Click "Finish". POS printer driver is installed successfully.



(8) After installation, the icon will be found in "Start" → "Devices and Printers".




NOTE: If you already installed the driver (No matter what kind of port), when you connect the printer with computer, it will create a USB port automatically.


5. Configuración detallada del driver de Windows


Preferencias de impresión

1. Click "Start" → "Devices and Printers". Right click "SAT38TUSE" and choose "Printing preferences".

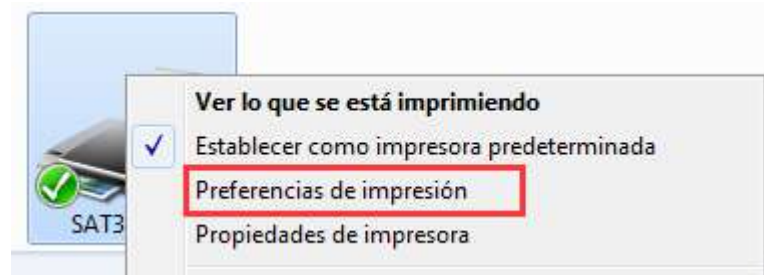

2. According to the different needs, choose “Paper”\“Offset”\“Rotate”\“Effect”\“Copies” in “Paper”.

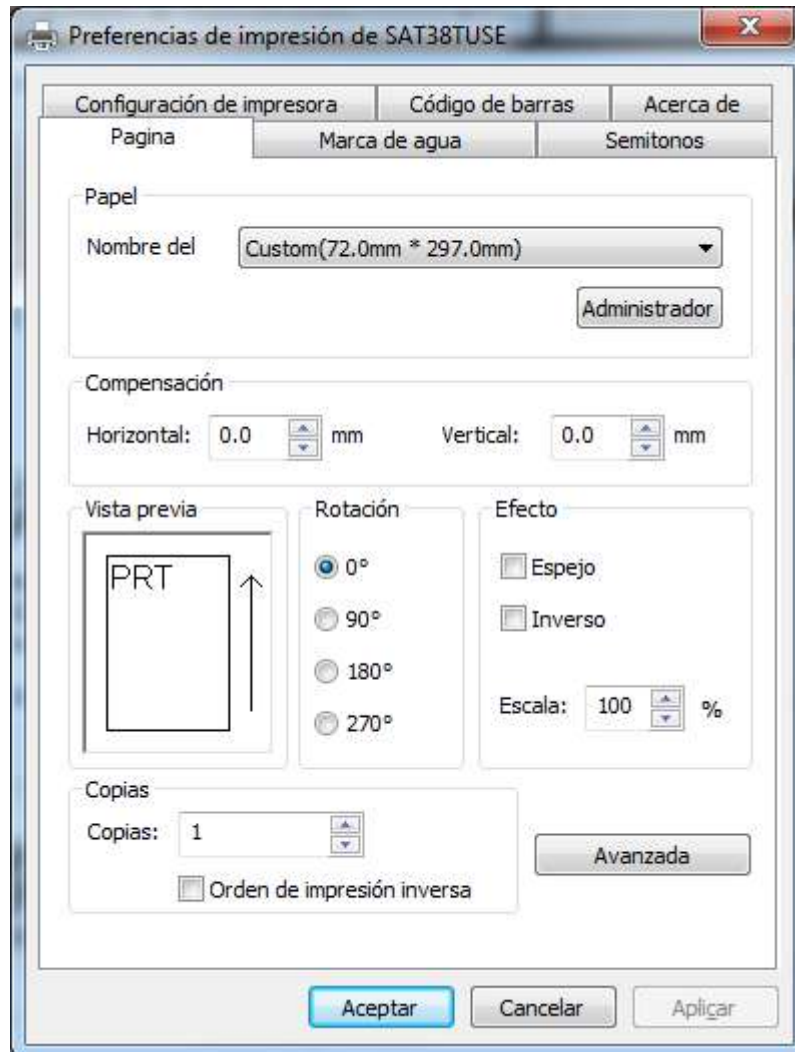

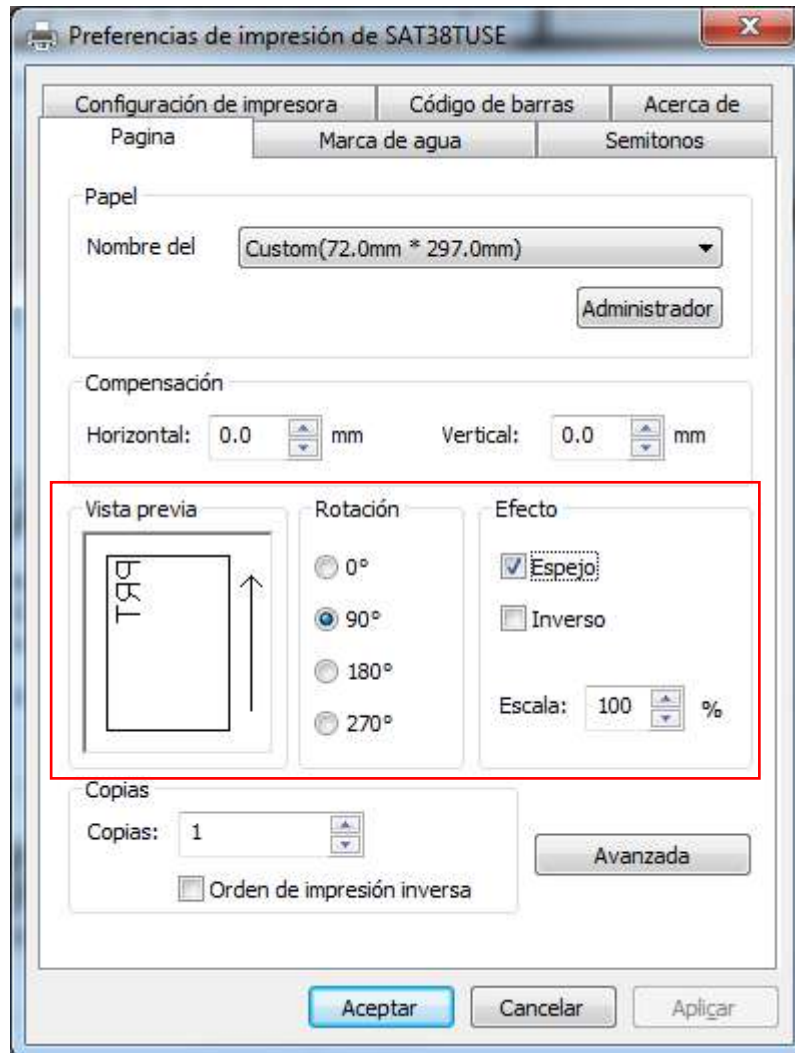

- Click on “Manager”, add or delete paper.

Papel

Nombre del

Administrador

Administración de papel personalizado

Lista de papel personalizado

Opciones de papel personalizadas

Nombre del

Ancho de [10.0 - 600.0 mm]

Largo de [10.0 - 3276.0 mm]

●Click on “Advanced” to set “Save Paper”、“Cut Paper”、“Feed Paper”、“Cash Drawer”、“Custom Command”、“Logo”、“Buzzer”、“Code Page”.

1) Save Paper

Copias
Copias: 1
 Orden de impresión inversa

Avanzada

Configuración avanzada



Comando personalizado	Logo	Zumbador	Código de pagina
Guardar papel	Cortar de papel	Alimentar papel	Cajón monedero


Ninguno Inferior

Superior Superior e inferior



Aceptar Cancelar

2) Cortar de papel

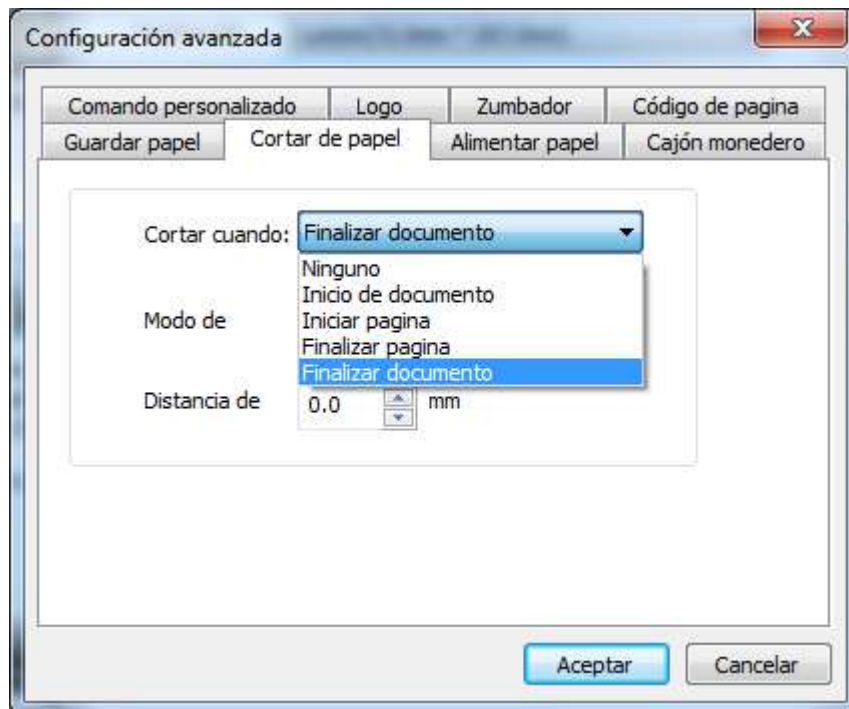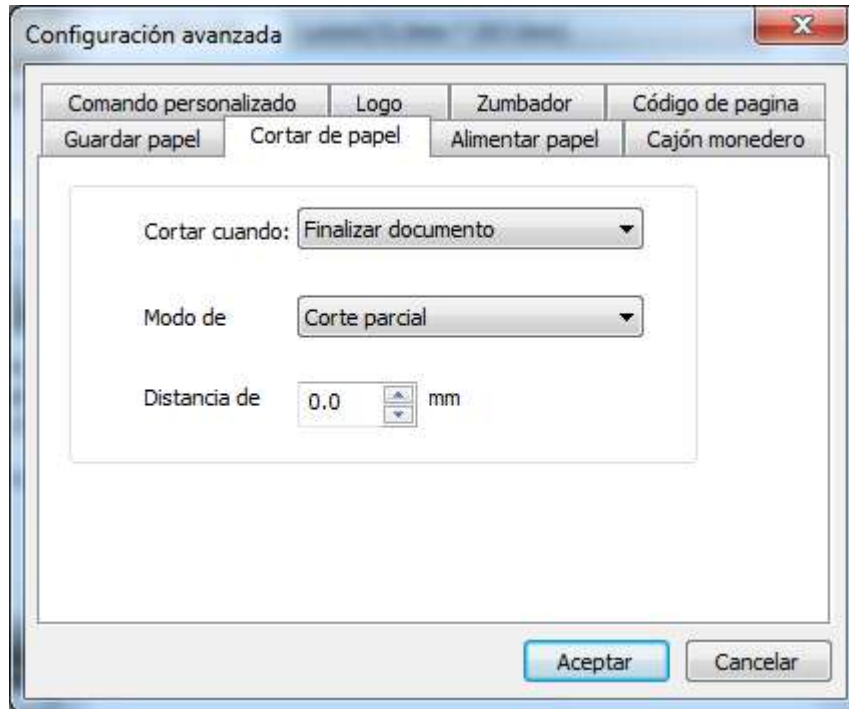


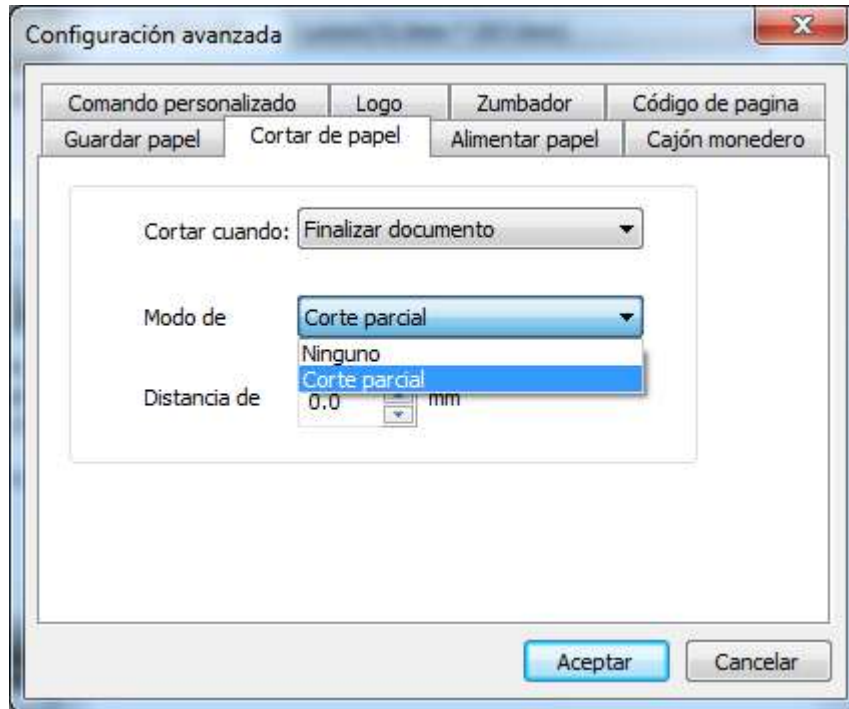



3) Alimentar papel

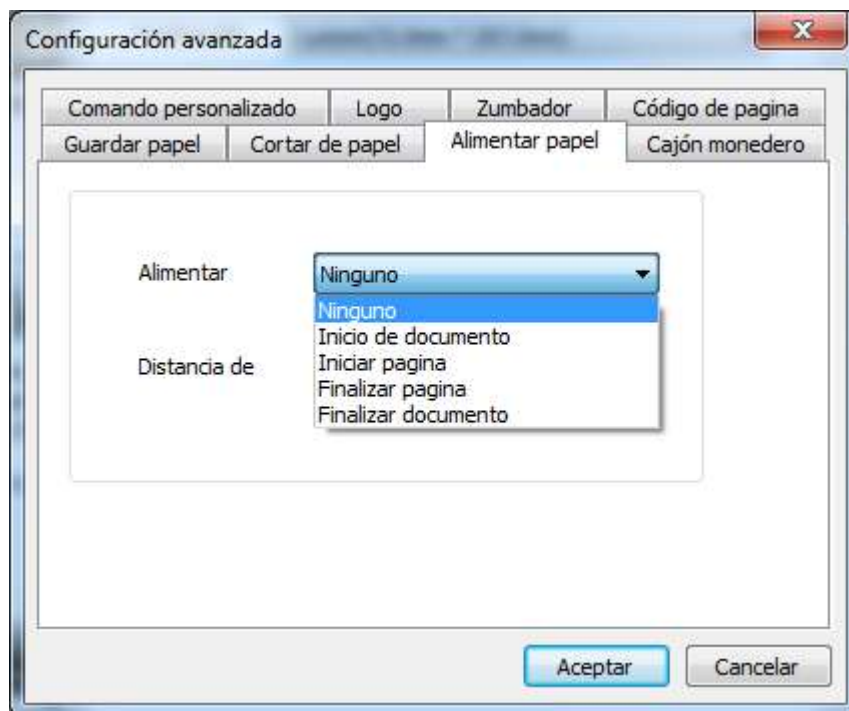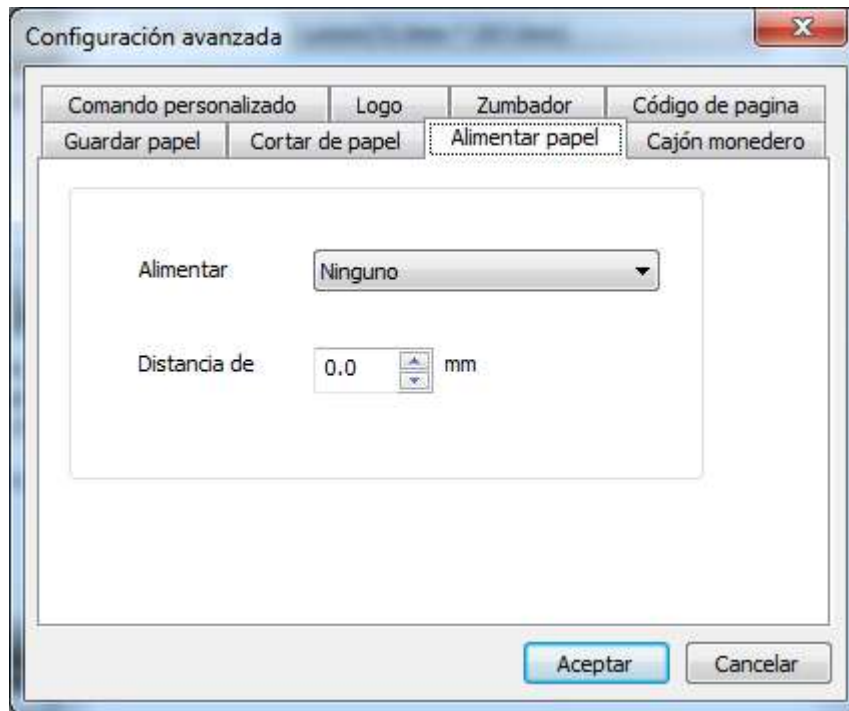


Feed Mode: Feed Automatically/Cut Automatically/Cut Automatically Per Page/None
Feed Distance: 0/5/10/15/20mm (End Document)


4) Cash Drawer

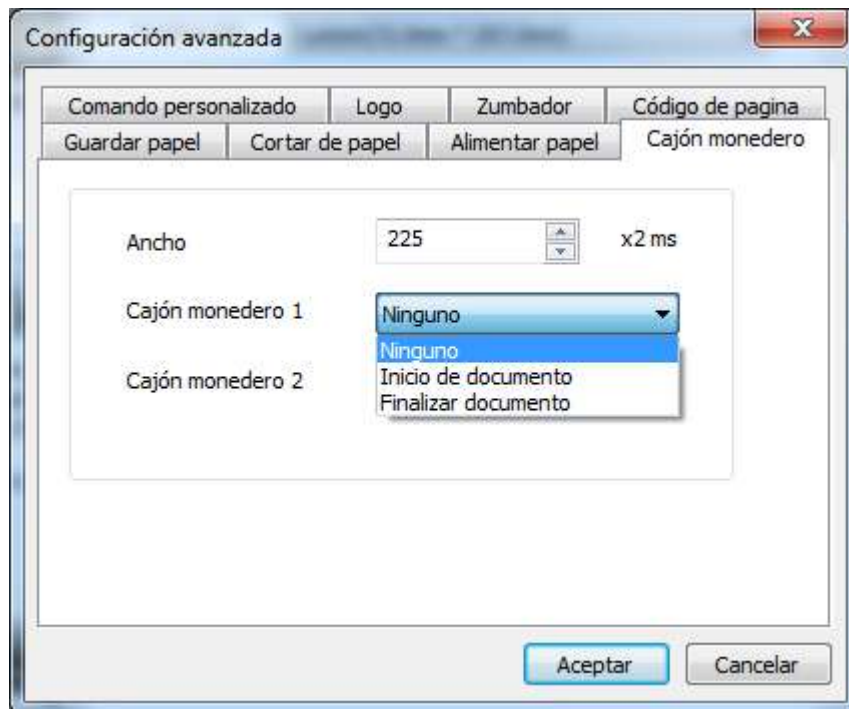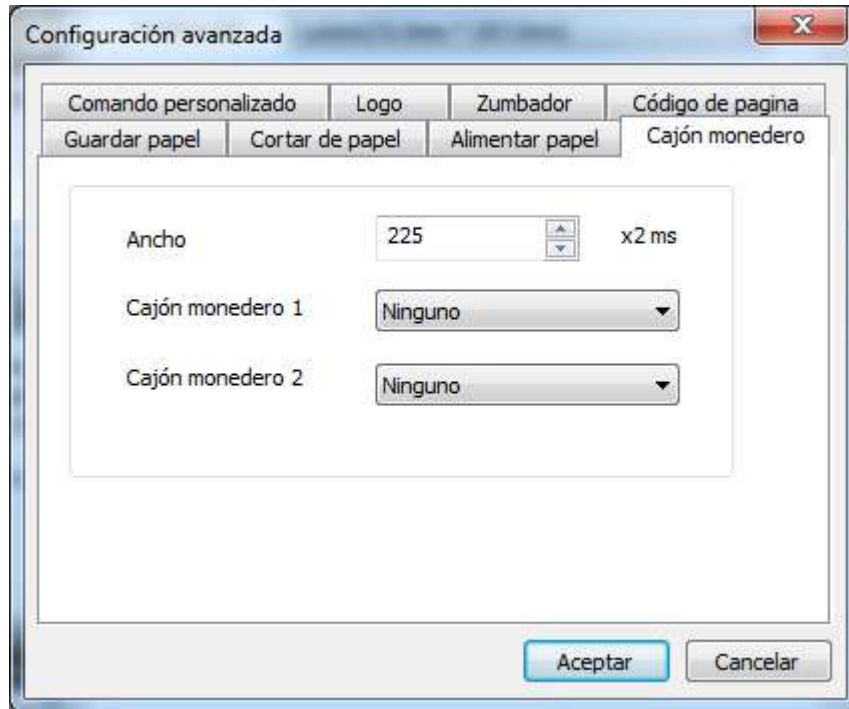

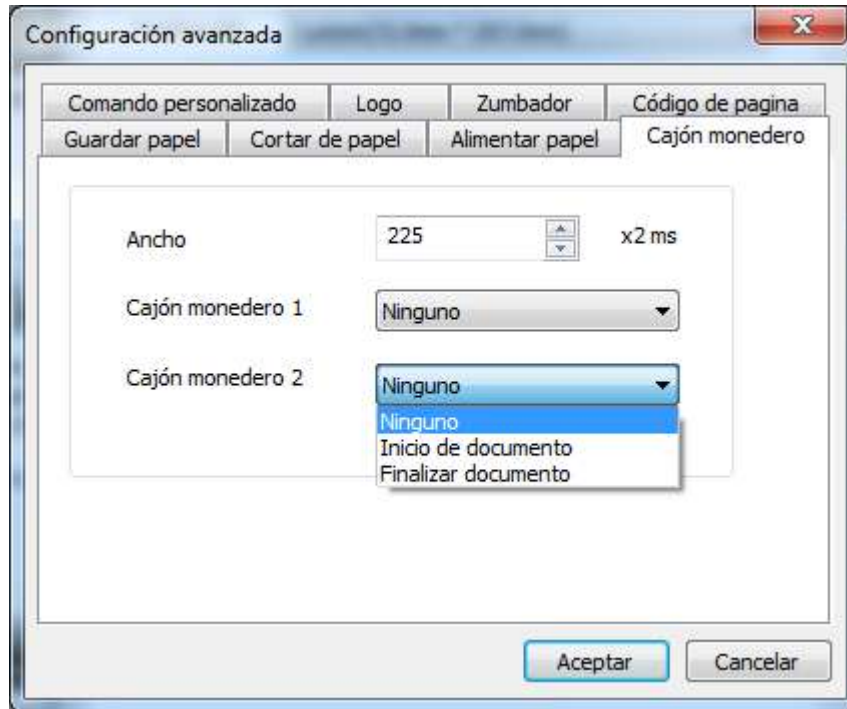

5) Logo

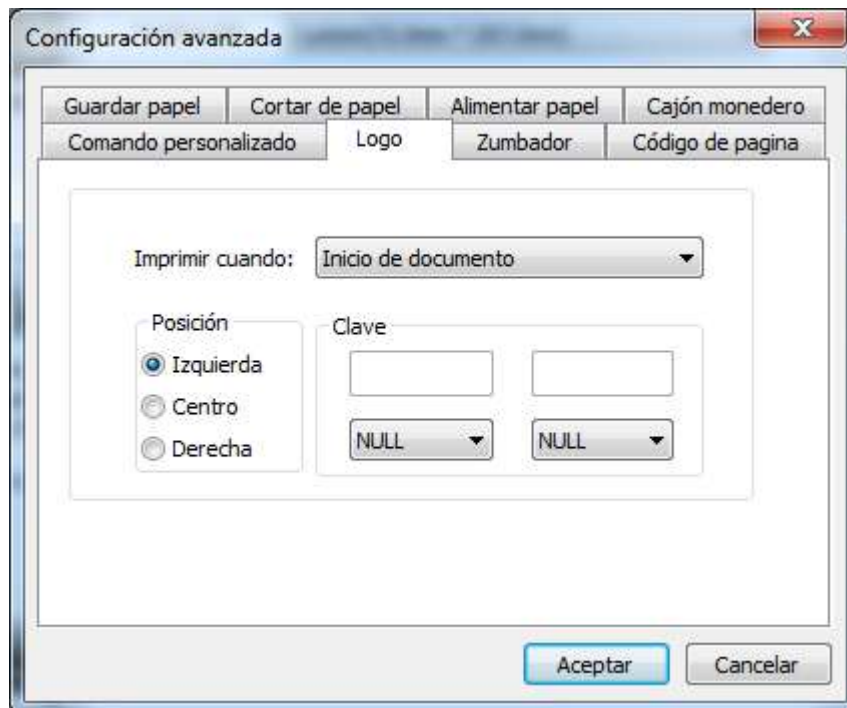


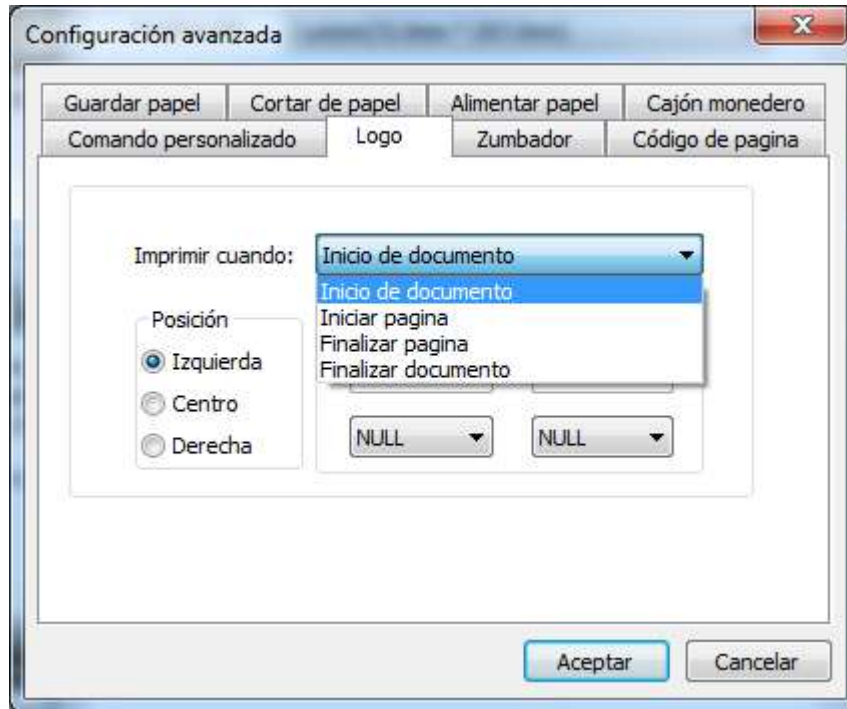


Note: The logo should be downloaded from the printer utility.

6) Zumbador




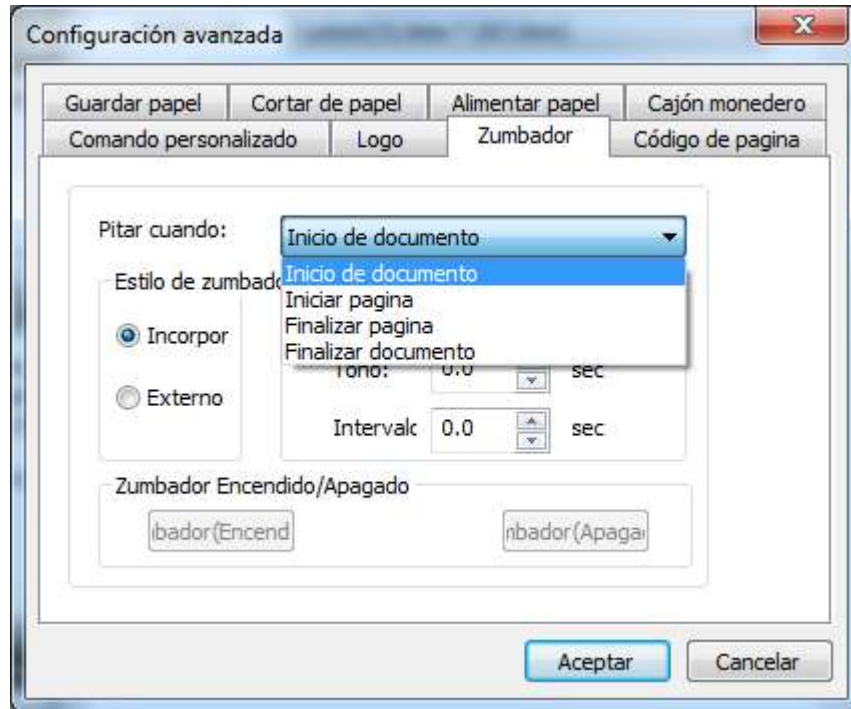


7) código de pagina

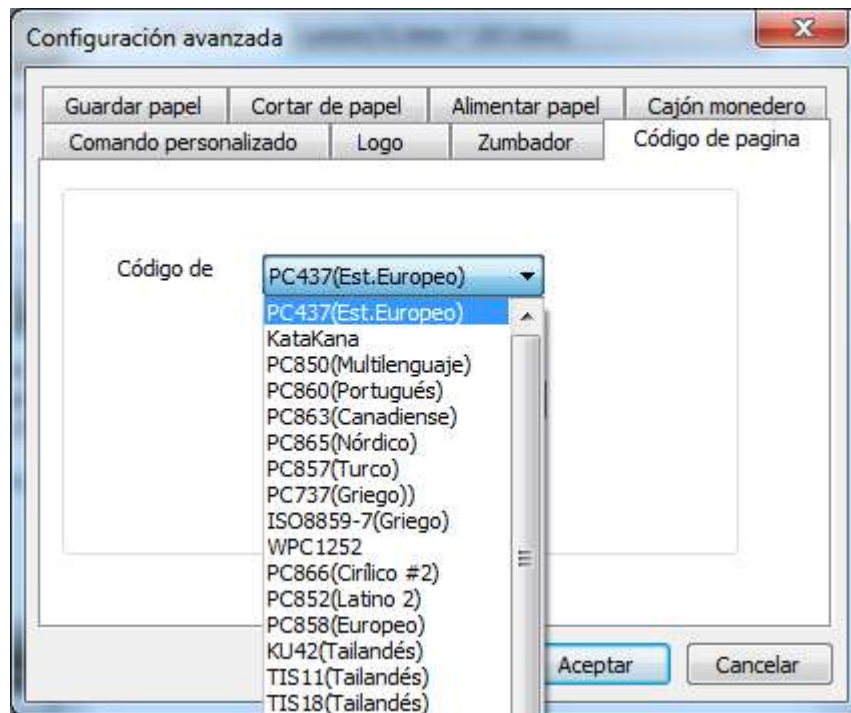


3. Click “Watermark” and set watermark to print.

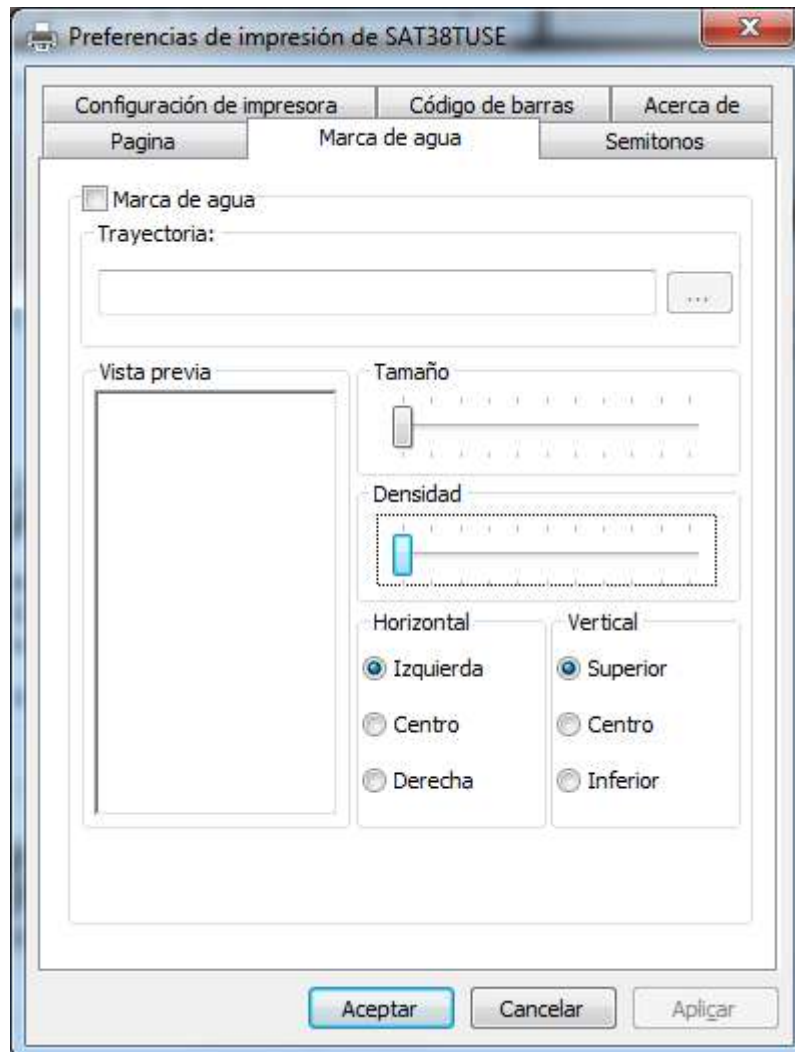

4. Click “Halftone” to set the halftone.

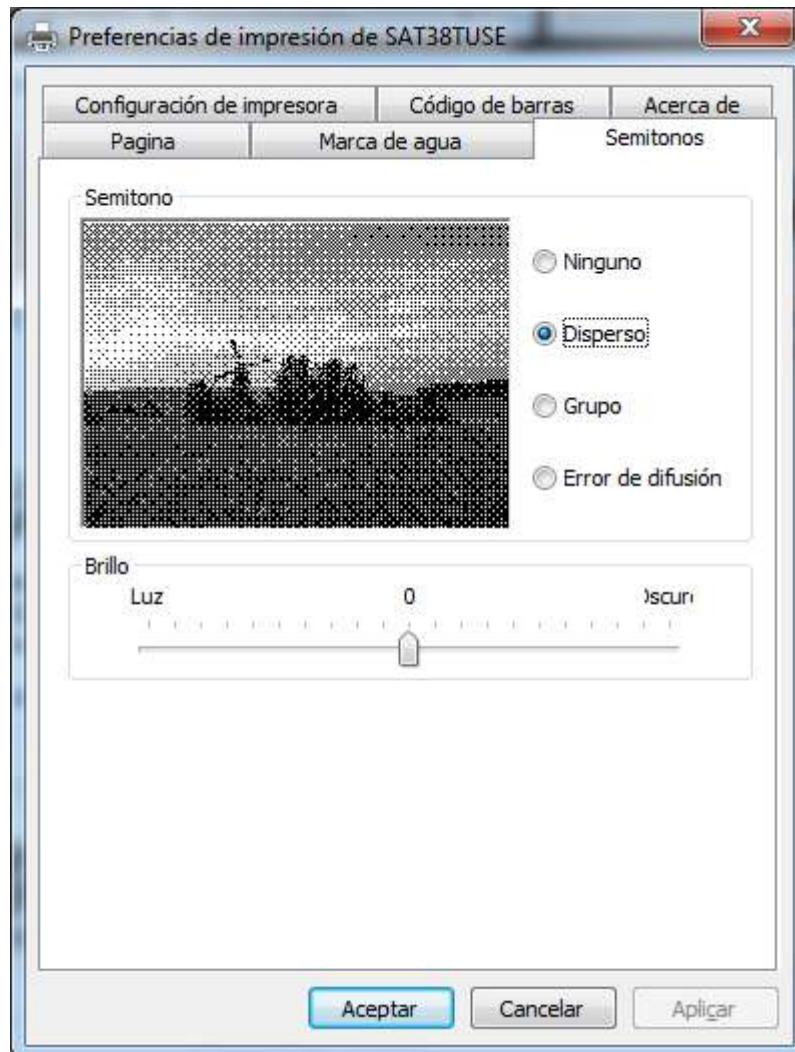


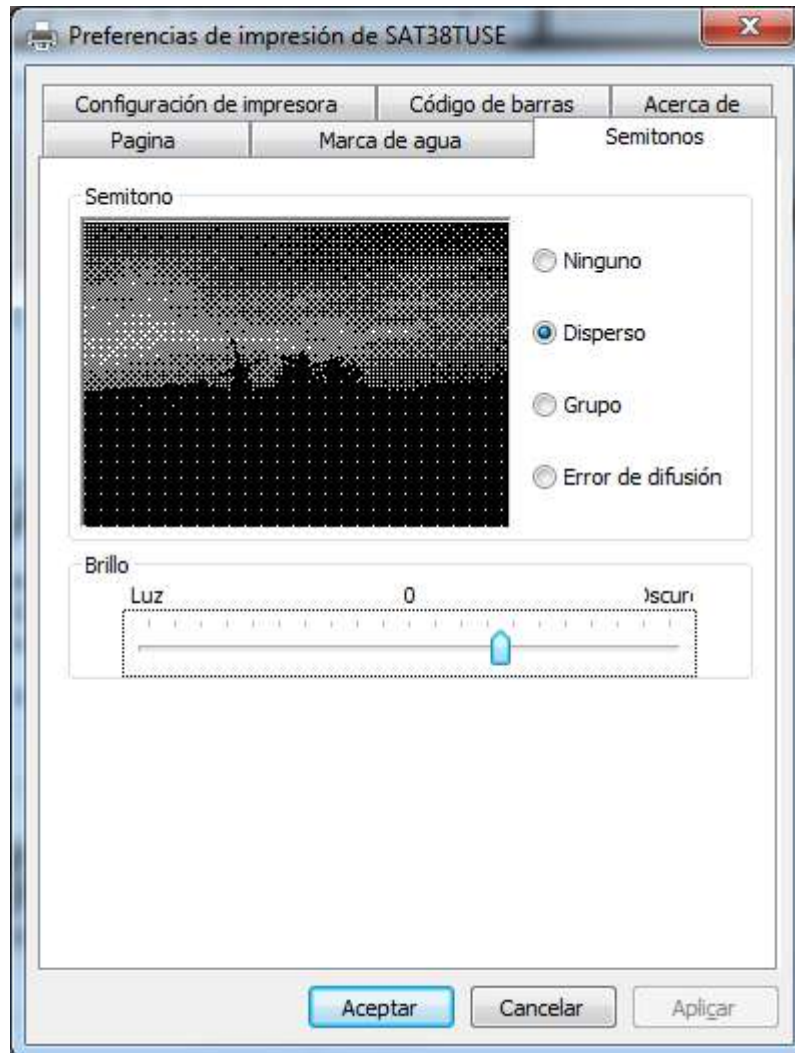

5. Set up the “Barcode”



Assuming the font type of the main document is “Italics”, if you want to convert the data “123456”to the barcode printing, the steps are as follows:

- Sets the data "123456" font type to a different font from the main document. Such as: Arial.

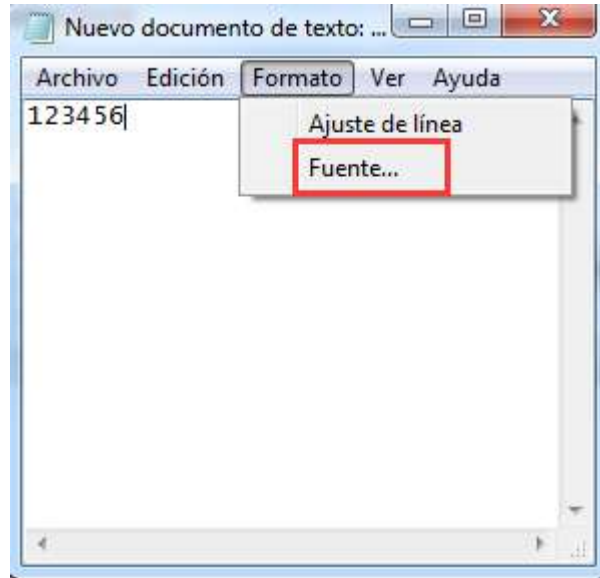


- Open the Preference.


If the document is open, you can set it in the document: file-print-preferences.

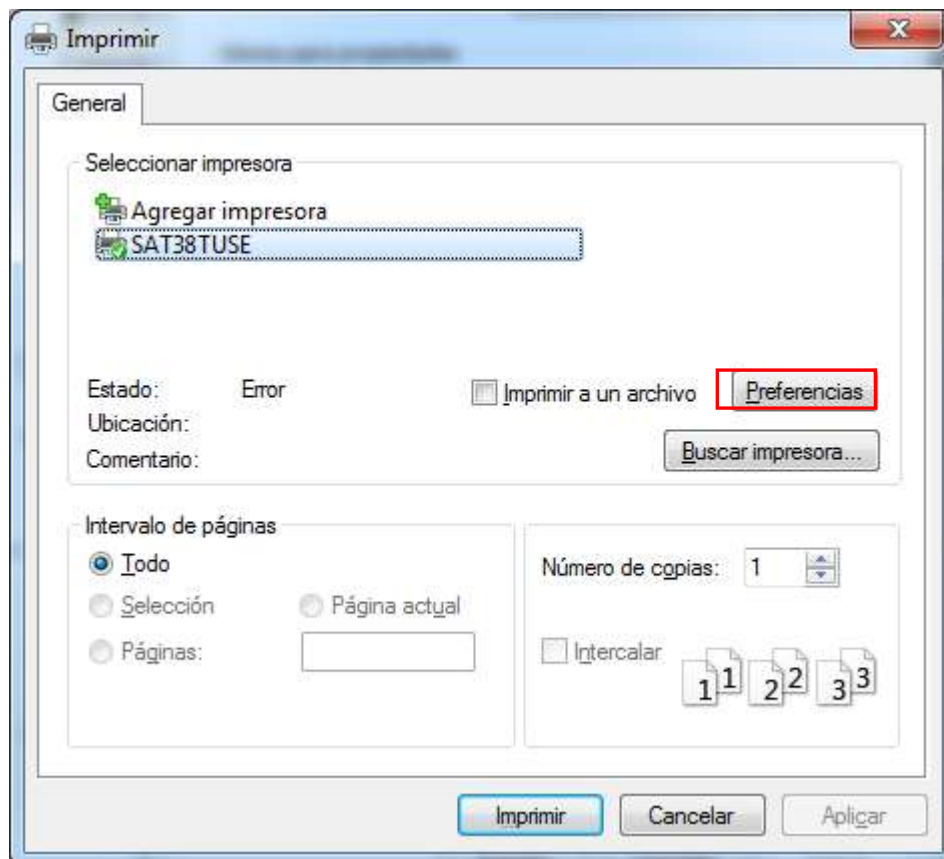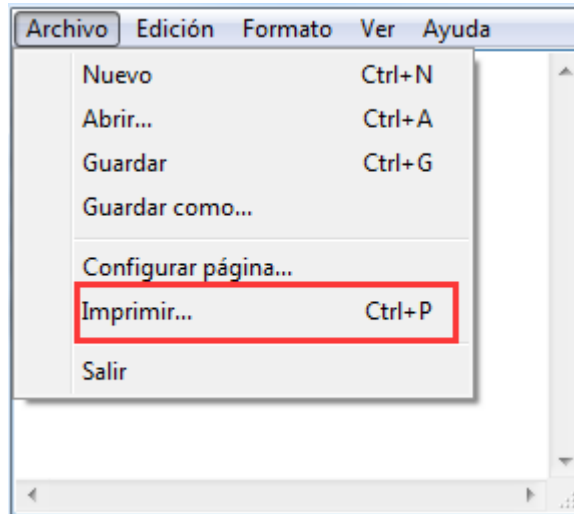

1) Add Barcode firstly.

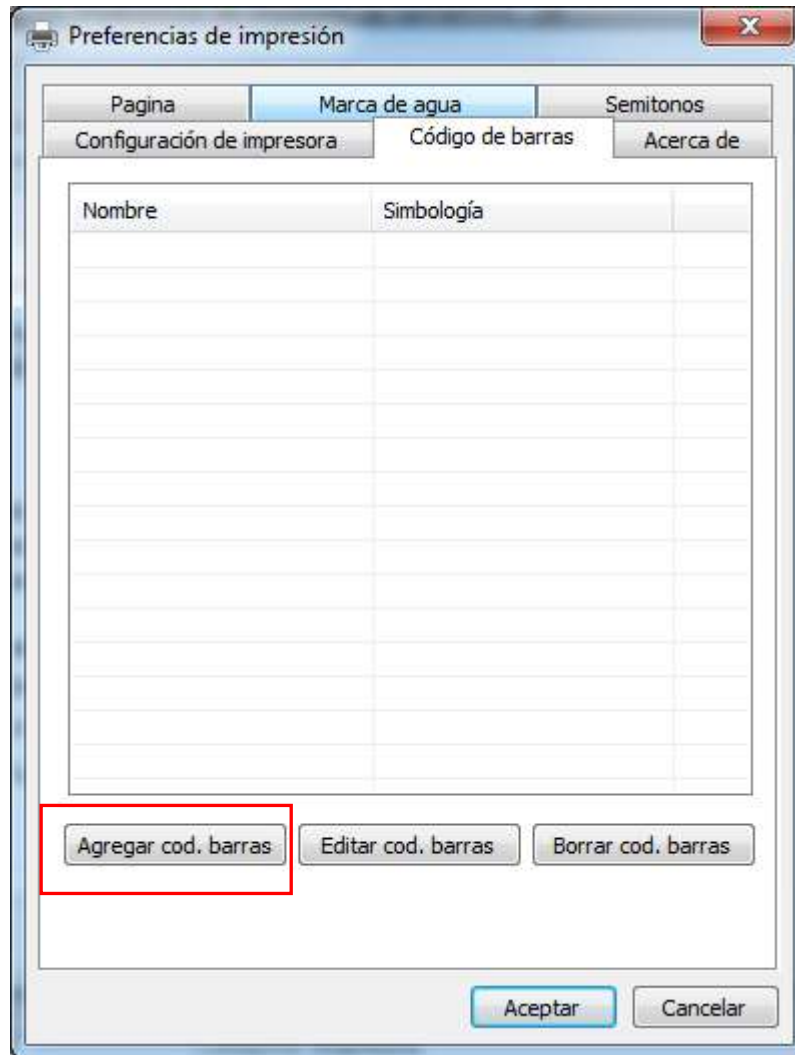


2) Set the “Font Name” and the “Barcode Option”.

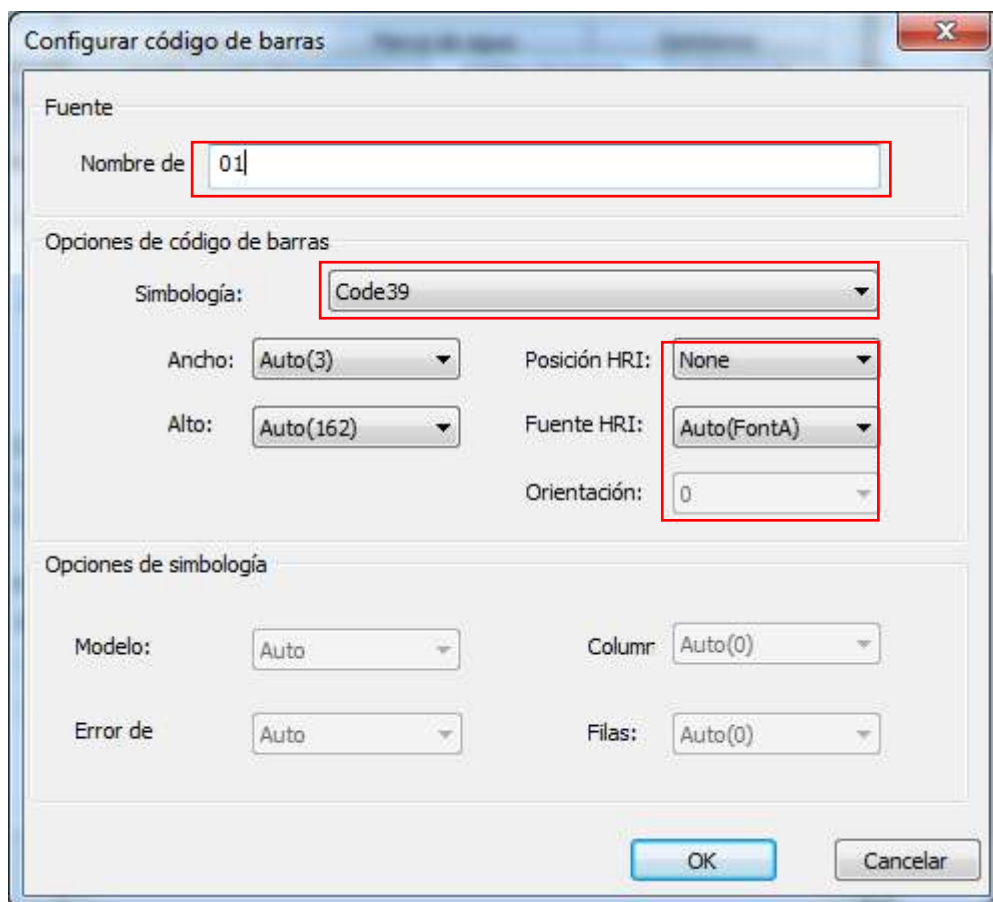

Nombre	Simbología
01	Code39


3) Click the “Printer Setting”.


- Choose the “Display Language for Properties”


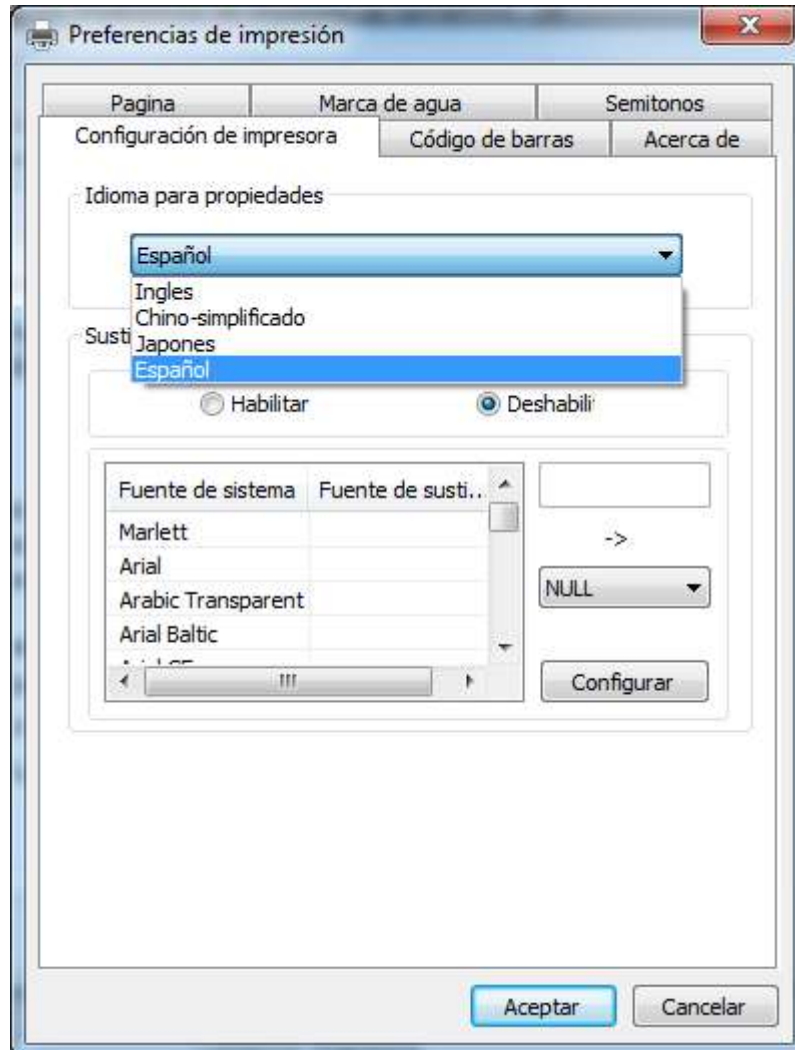



- Turn on the “Font Substitution”, select the system text need to be replaced (for example, Arial), and then select the font you want to replace (for example, 01) and click Settings, and the replacement font will display "01".

the steps are as follows:

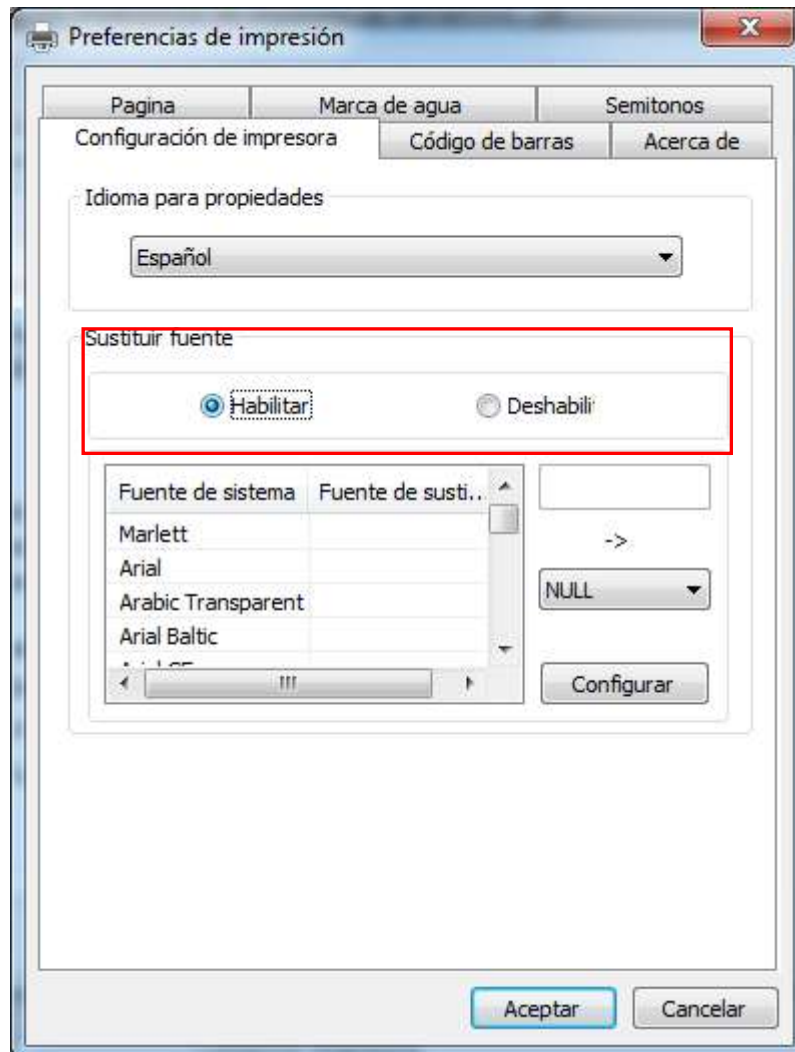

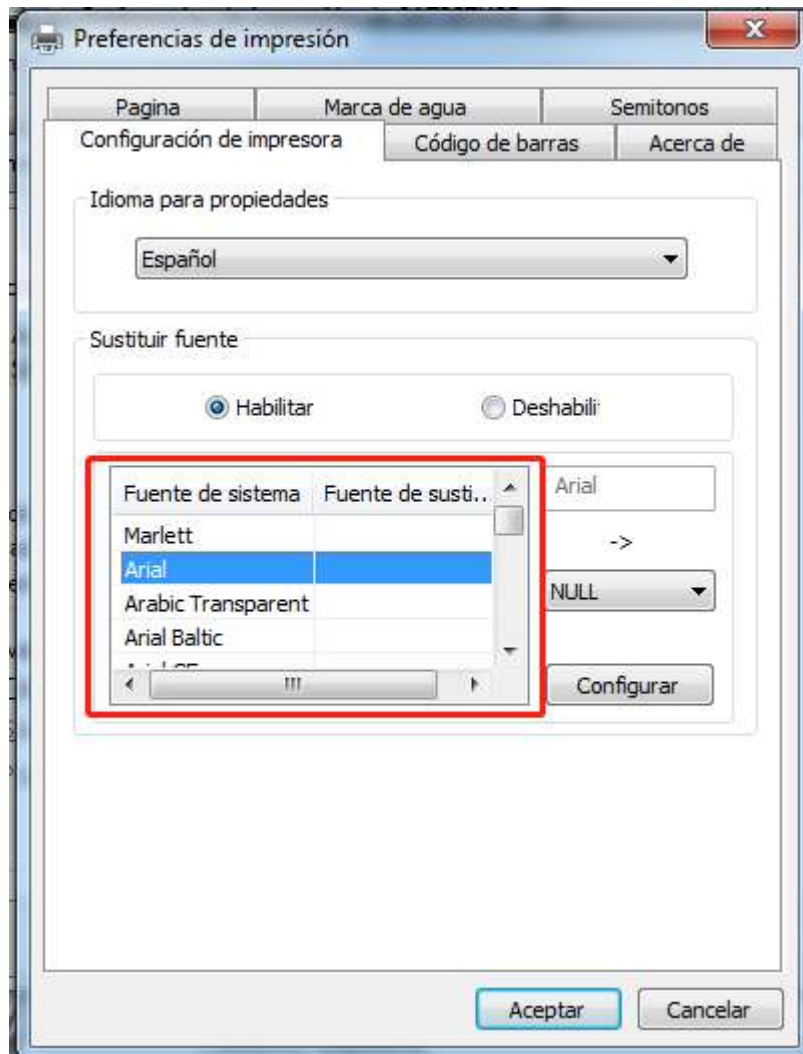


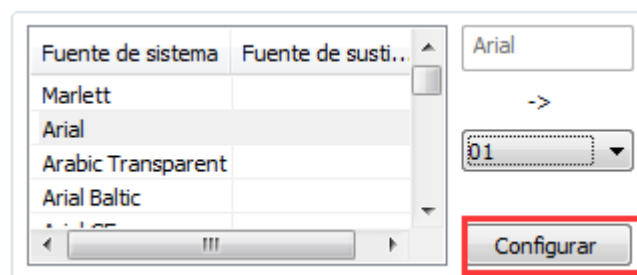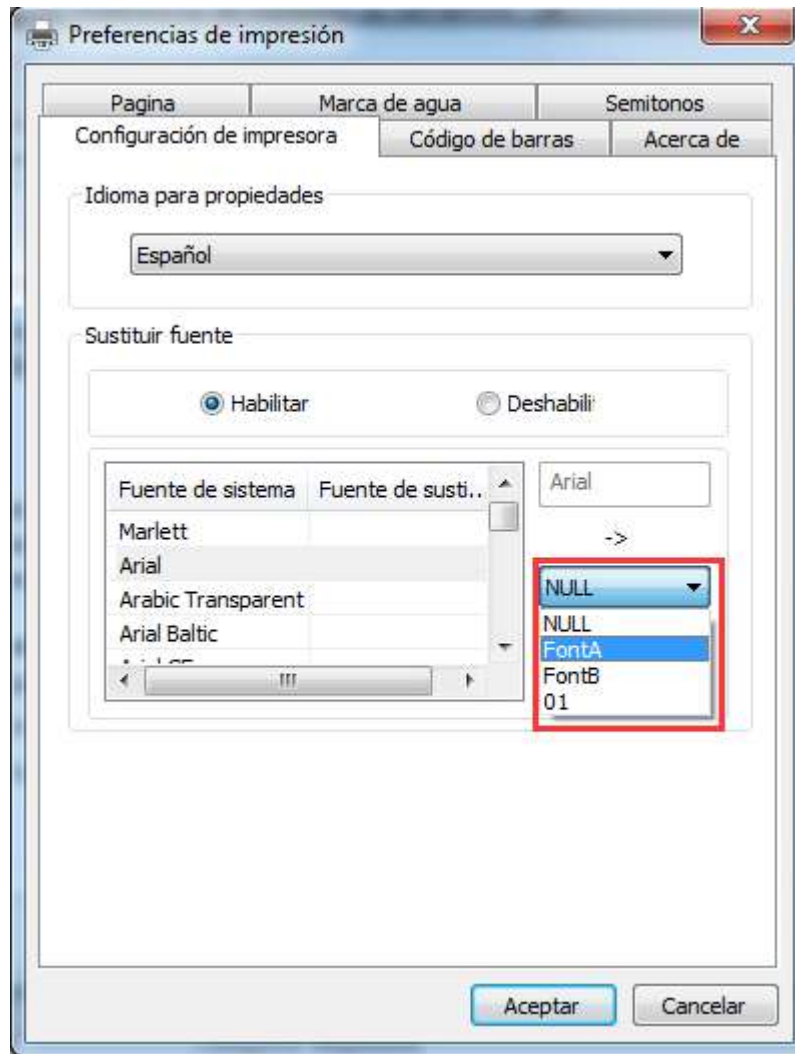

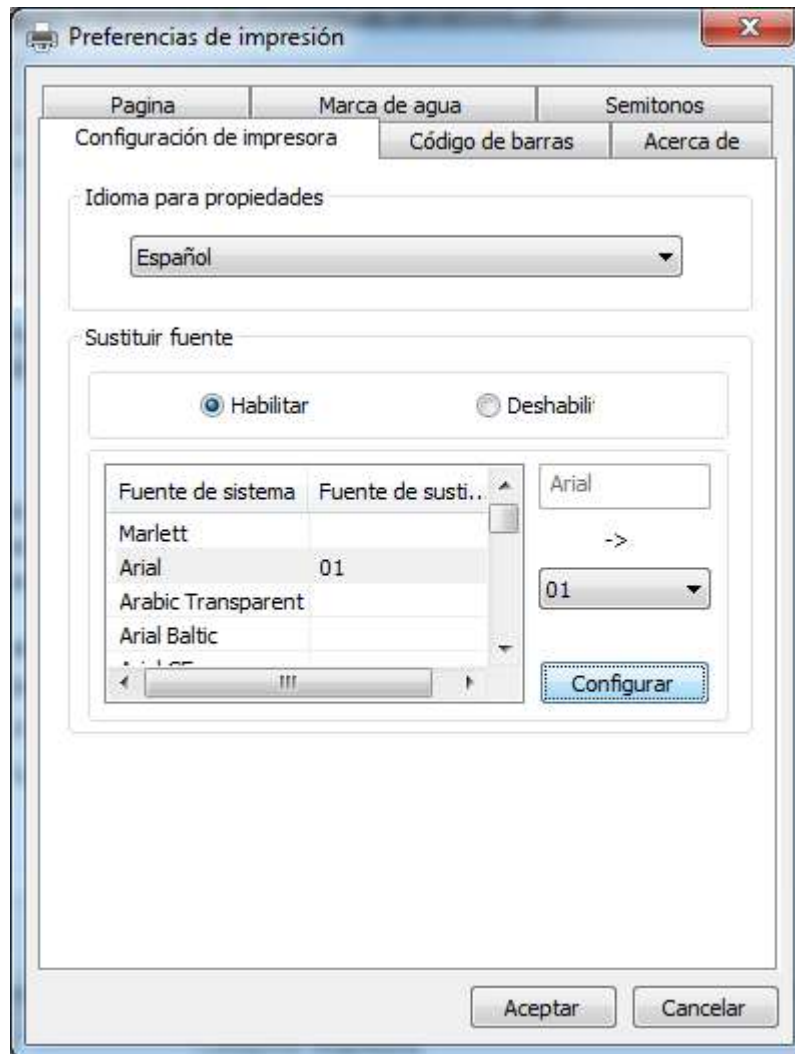


- If you do not have a barcode set, the action is as follows:


1) Suppose you change the size of the data "123456", for example:

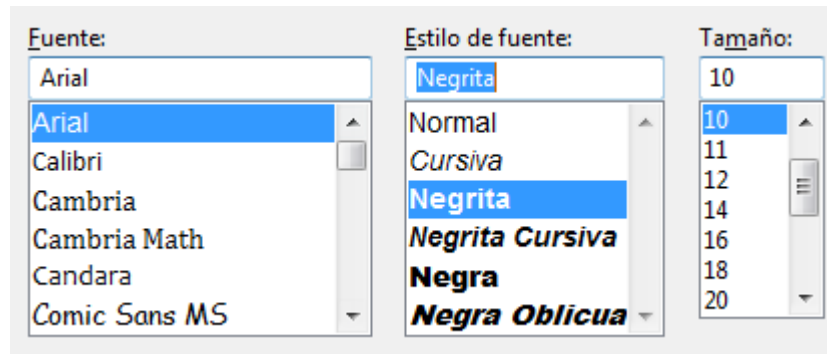


2) Set the Printing preferences.

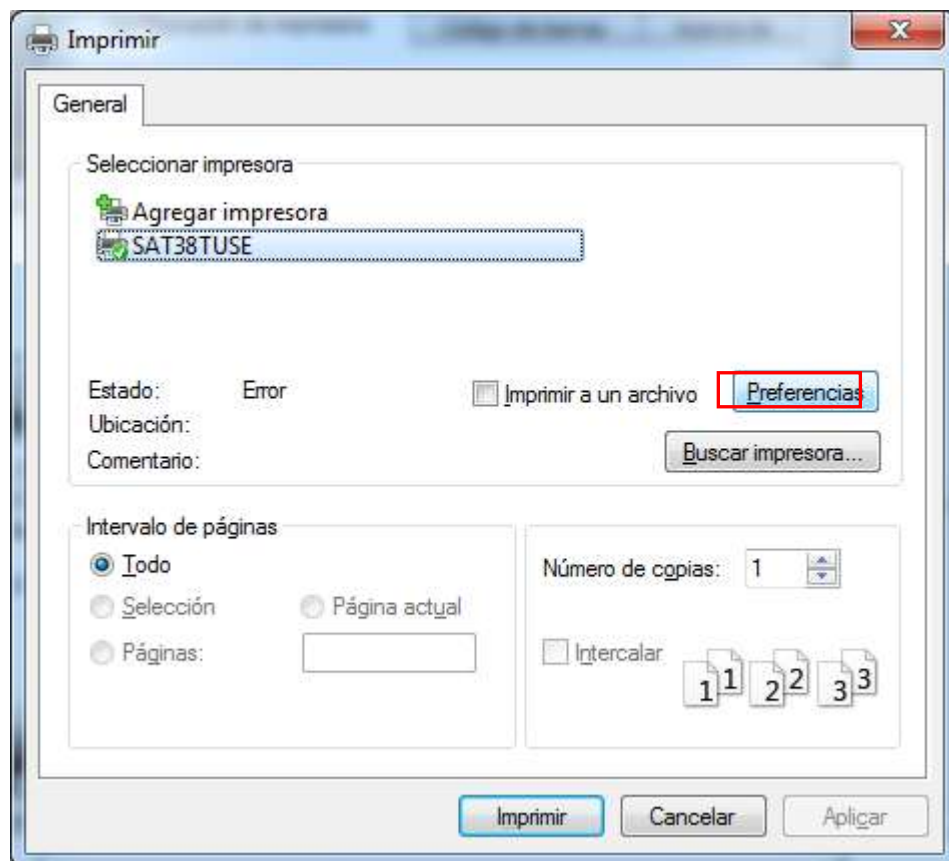


- 3) Click the “Printer Setting”.
- Choose the “Display Language for Properties”.

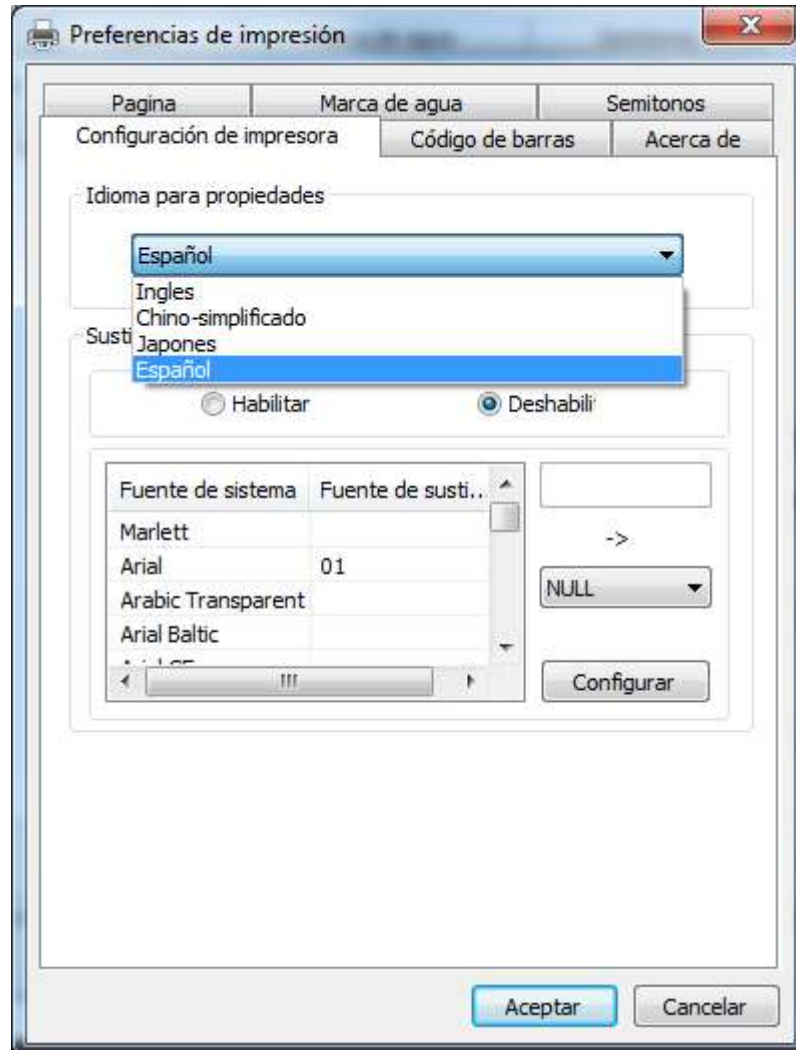


- 4) Turn on the “Font Substitution”.

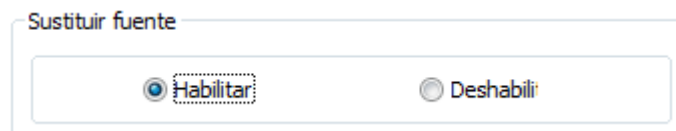


5) Select the "System Font", for example: Arial.


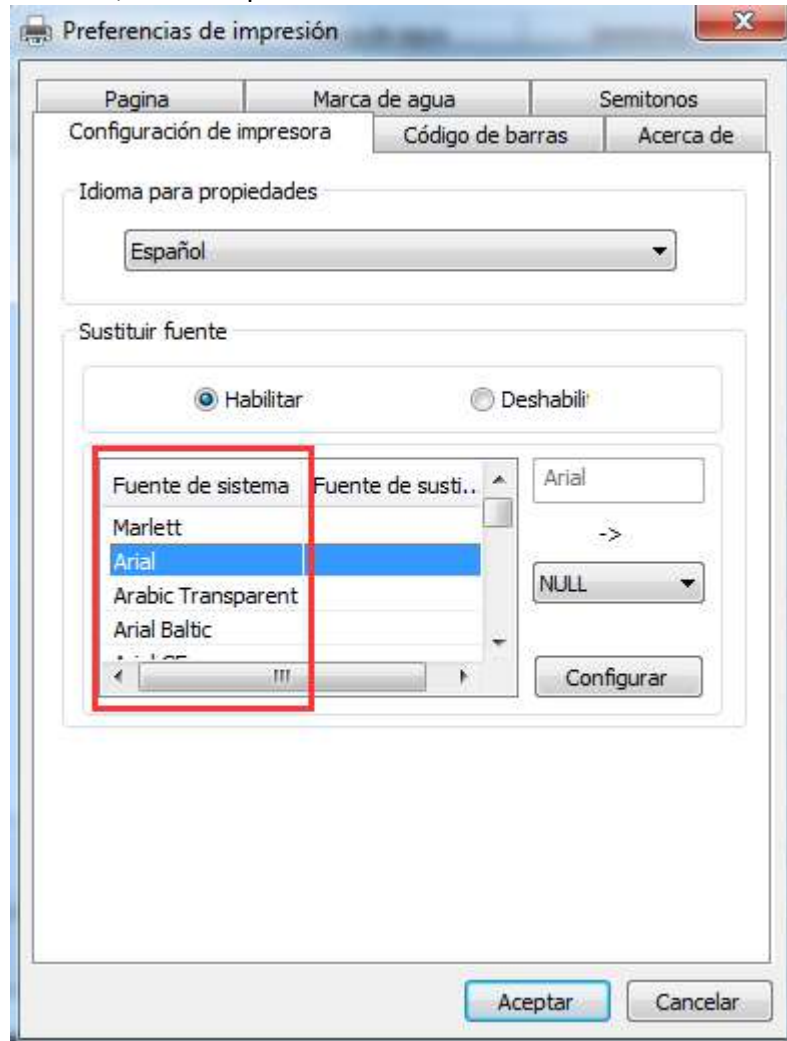


6) Select the font to that you went to replace.

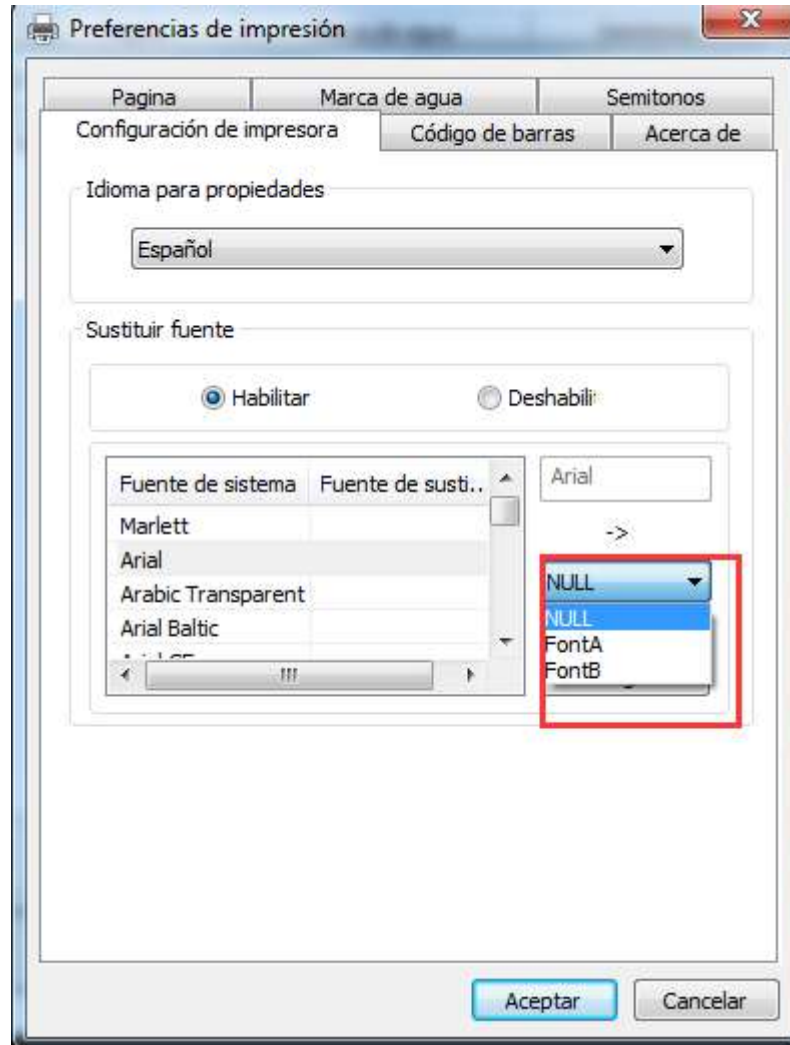


7) Click "Setting".

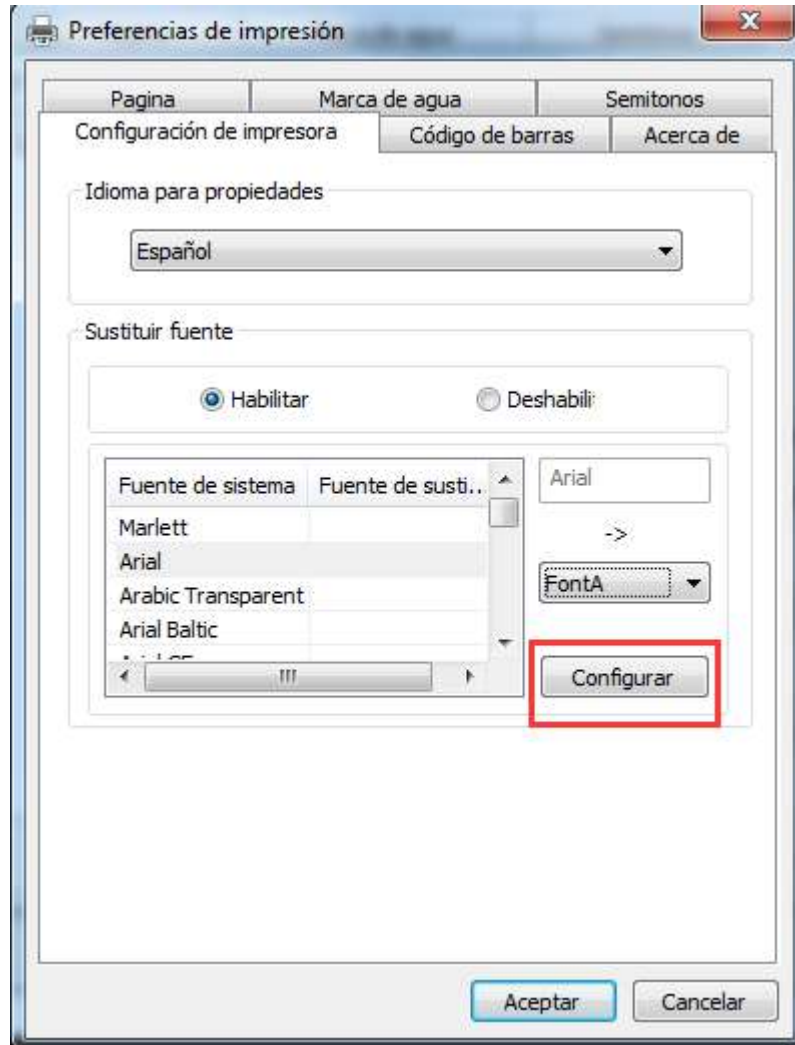

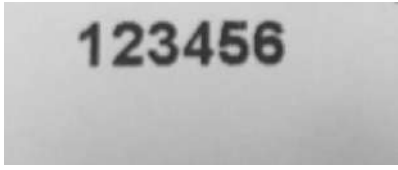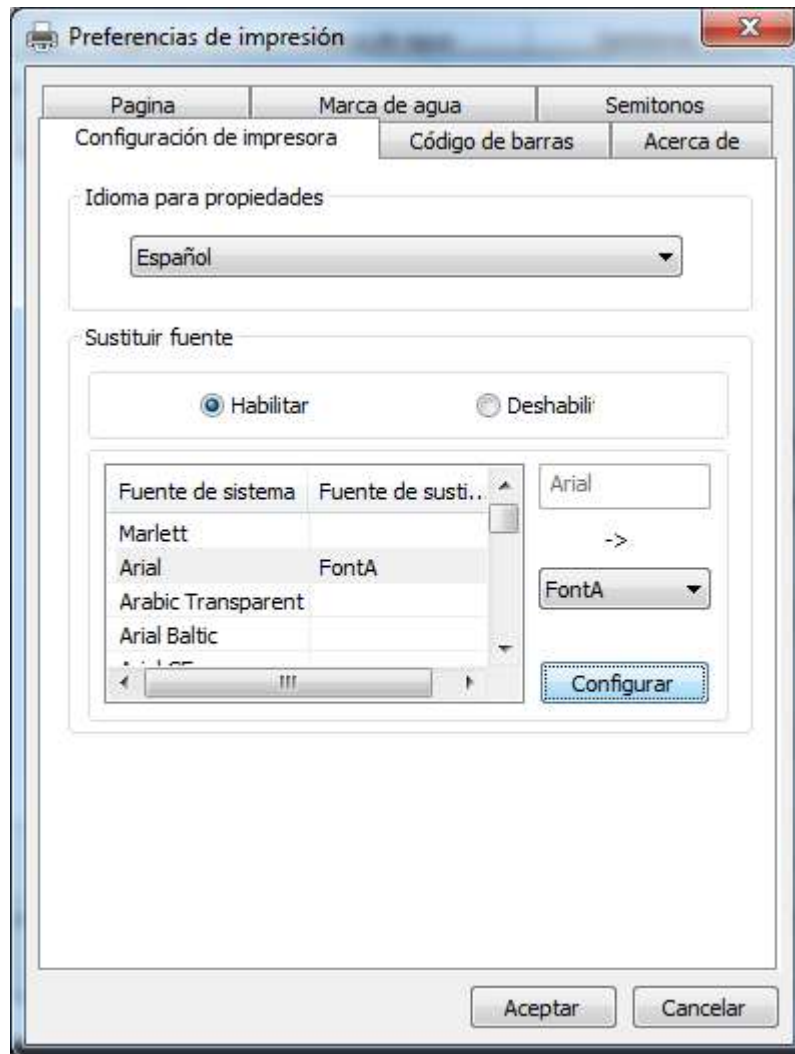


Otras configuraciones


1. Dé Click en "Inicio" → "Impresoras y faxes". Click derecho sobre "SAT38TUSE" y seleccione "Properties".

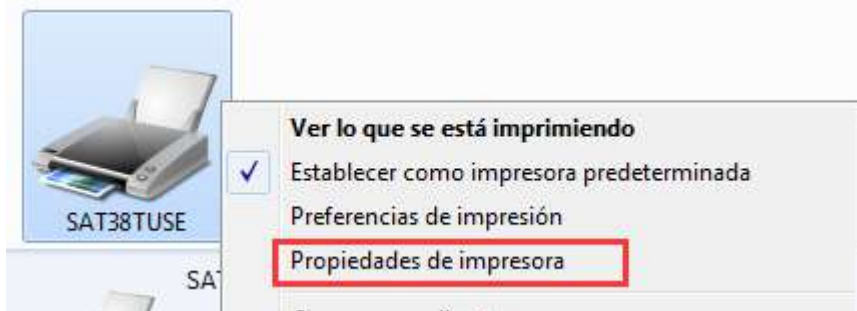


2. Choose "General", click on "Print Test Page", then it will print the current settings.

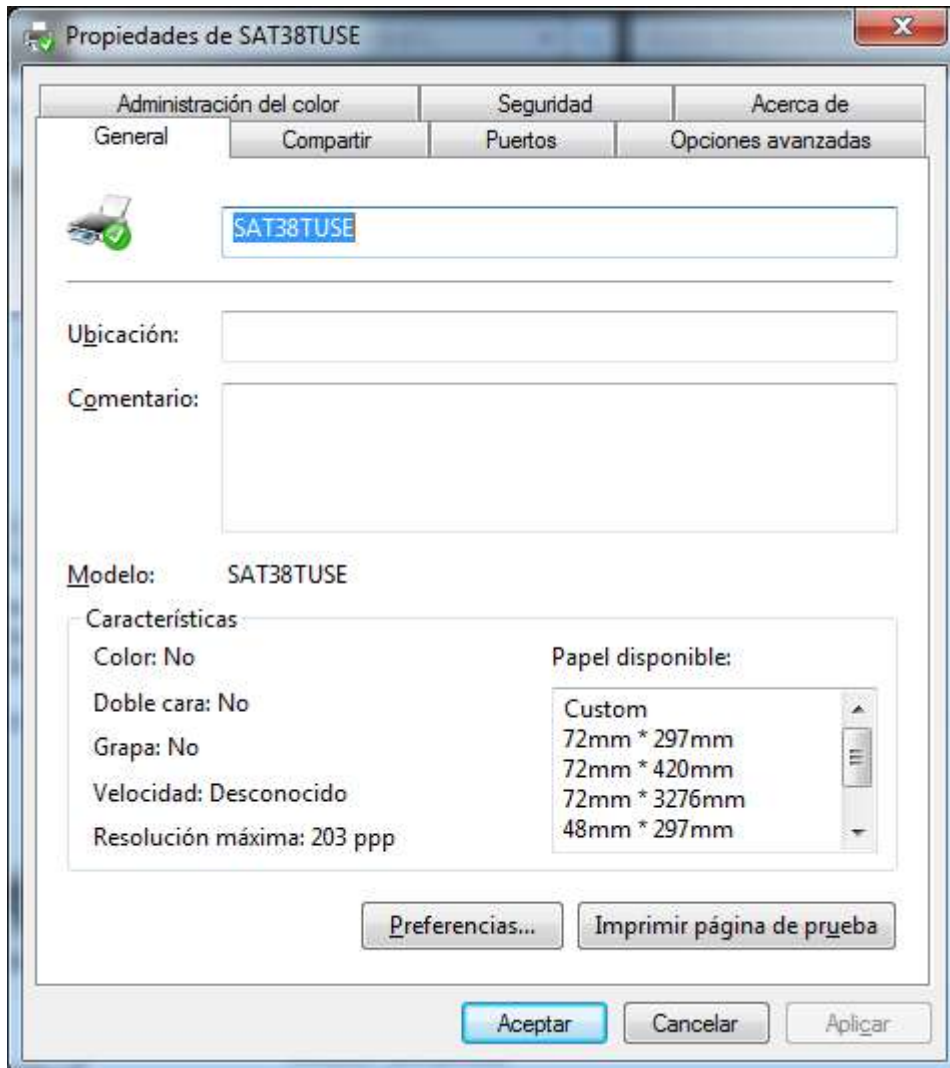

3. Setting the “Ports”

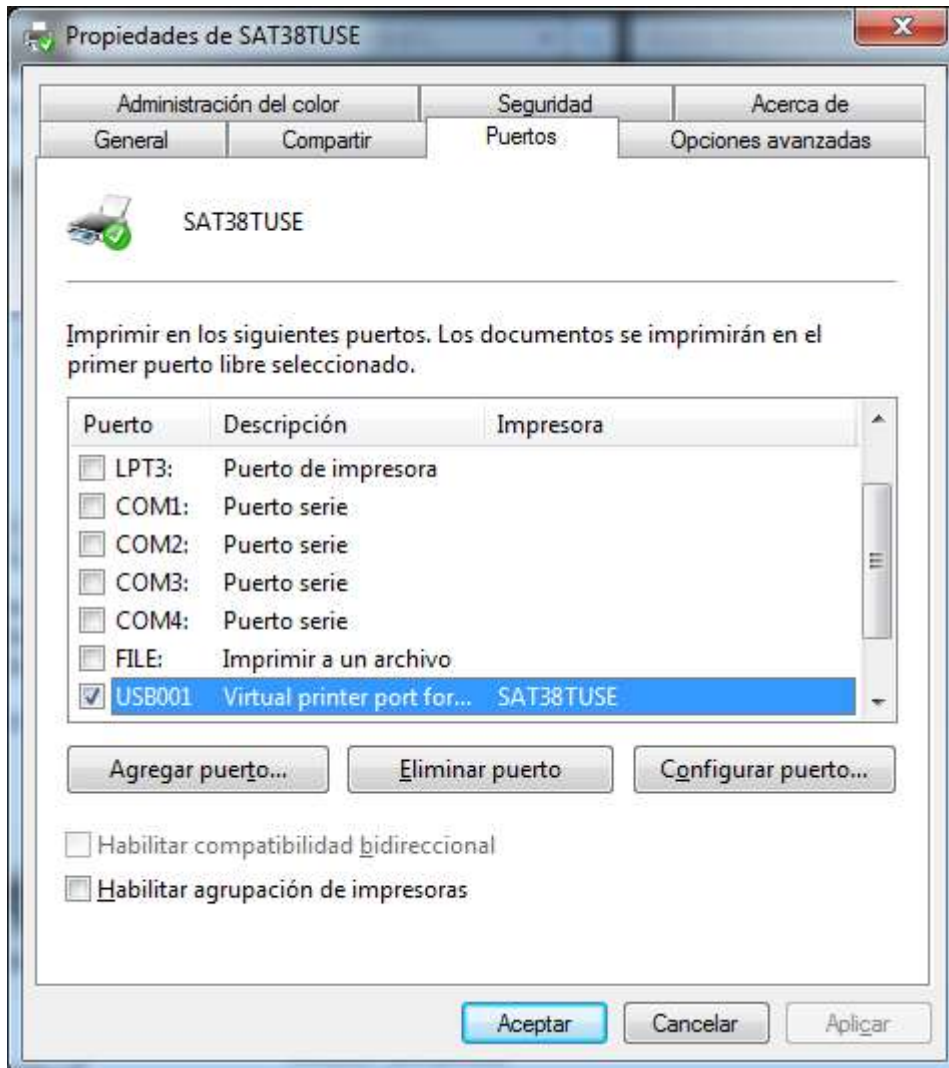


4. Click "Advanced" to set the printing time.

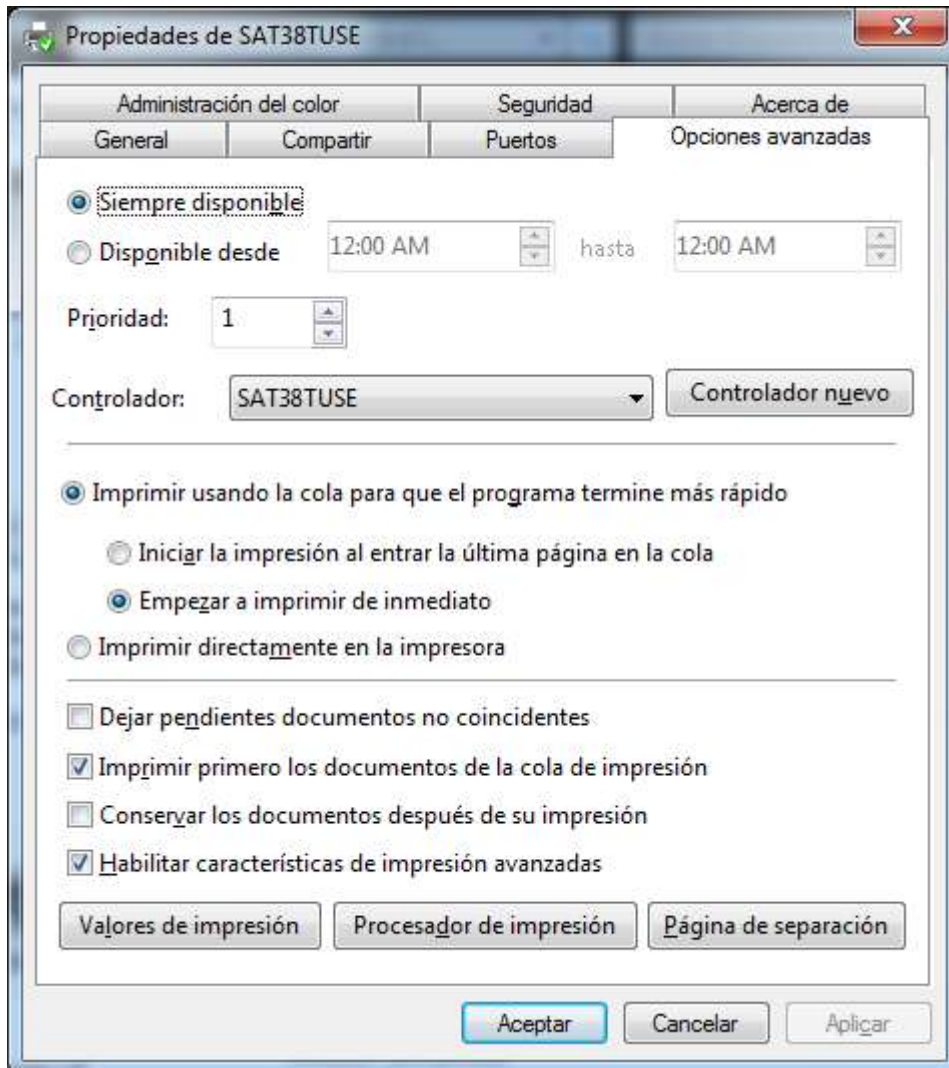


6.Uninstall Windows Driver

- 1) Double click Windows Driver.
- 2) Choose “Uninstall printer driver”, then click “Next”

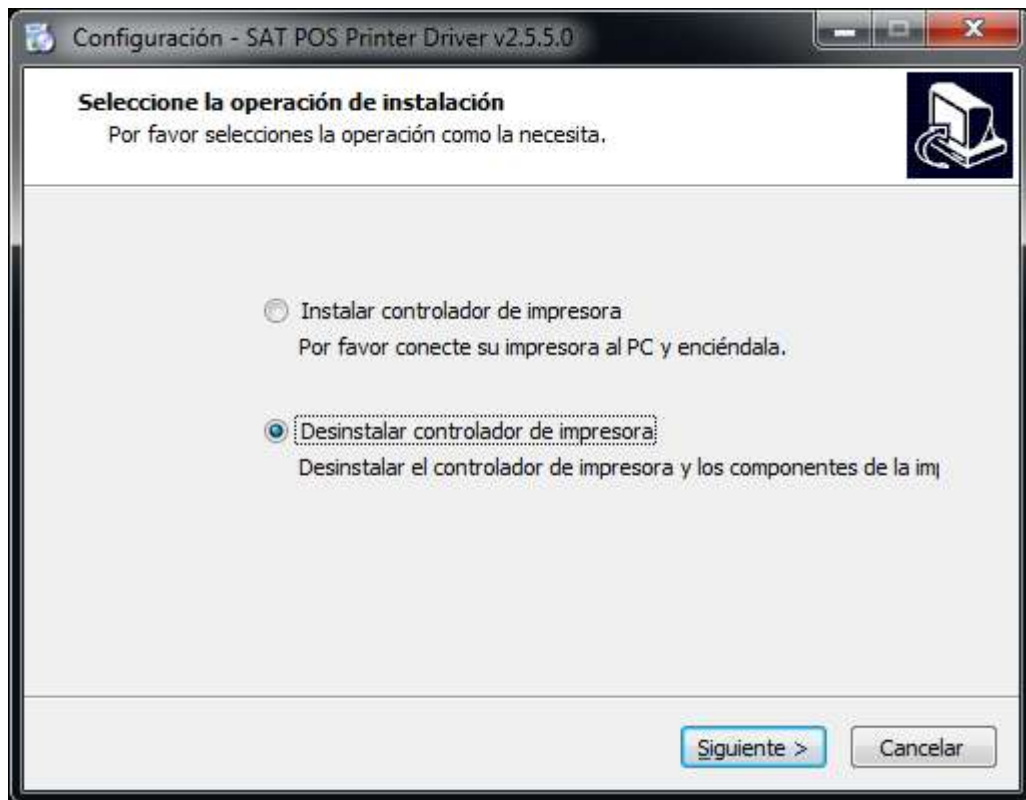

3) Choose “SAT38TUSE”, then click “Next”

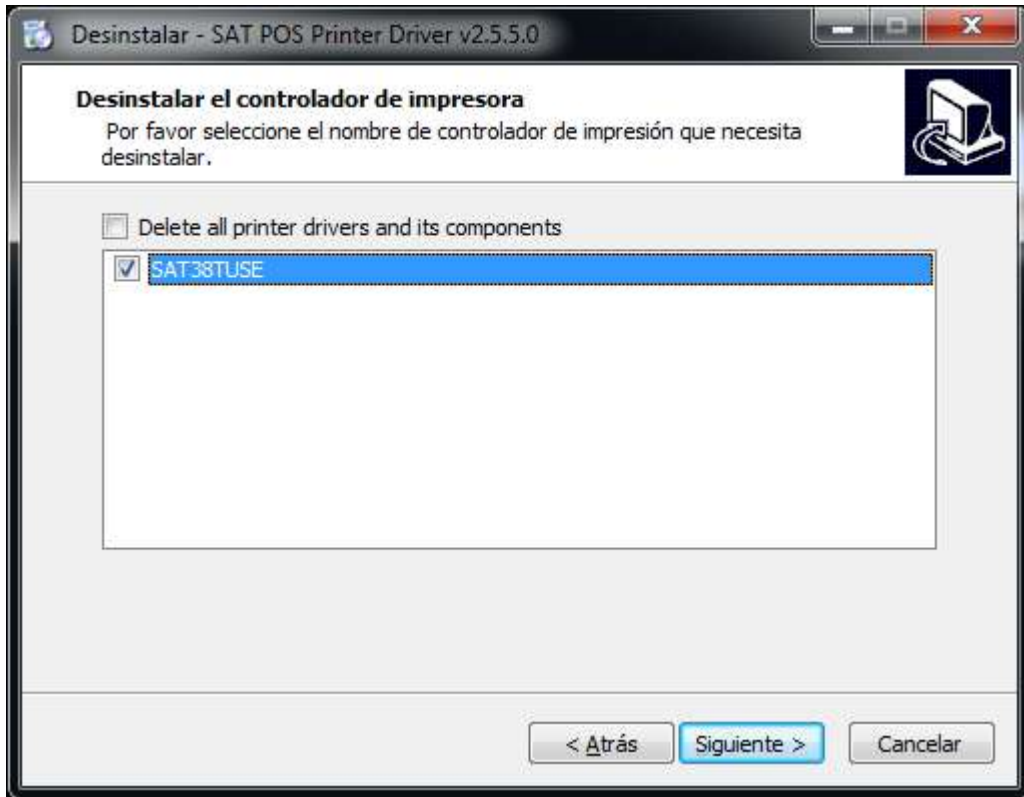

Then it is complete to uninstall.

7.Especificaciones

Resolución:

SAT SAT38TUSE: 203×203dpi

Tamaños de papel:

Custom(210.0mm*297.0mm)

A4

58mm*297mm

80mm*297mm