




## Quick Start Guide

### SAT DTL58

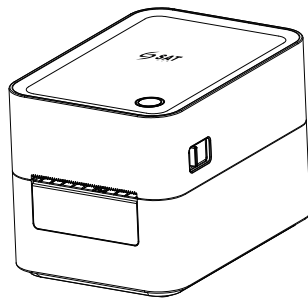

Technical Support



**Caution:**  
This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

## Packing List



Printer



 
Power Adapter



Power Cord



Quick Start Guide



USB Cable



Roll Paper




USB Flash Disk

Note: The packing items are based on the order.


## Appearance and Components

■ Front View

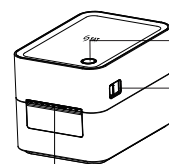

Paper Outlet

■ Rear View

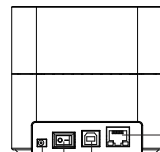


Power Receptacle

Power Switch

Ethernet Port

USB Port

■ Inside View

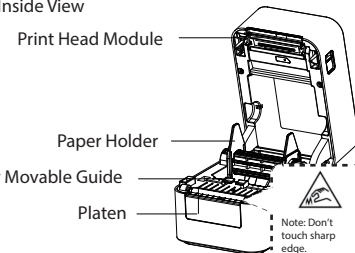

Print Head Module

Paper Holder

Paper Movable Guide

Platen




Paper Sensor




Note: The views above are for your reference. Ports vary by your choice.

## Load the Paper Roll


1. Push the cover open levers on the both sides with both hands to open the top cover upward.

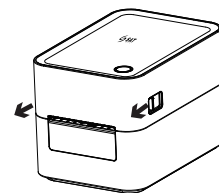


2. Take out the paper holder.

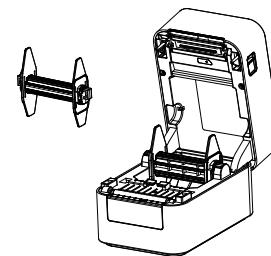


3. Load the paper roll to the paper holder according to the following appropriate size.

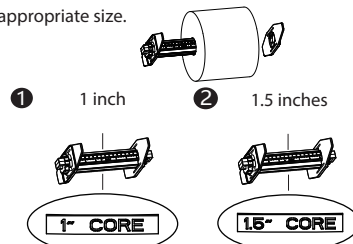

5. Pull out part of the paper roll, pass the paper through the paper movable guides, then adjust them to suit the paper width.

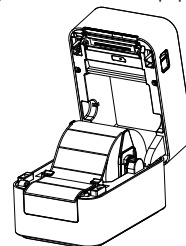

6. Press down the printer cover.

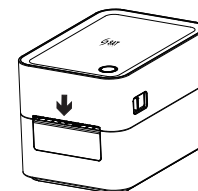

## FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



## Connect the USB

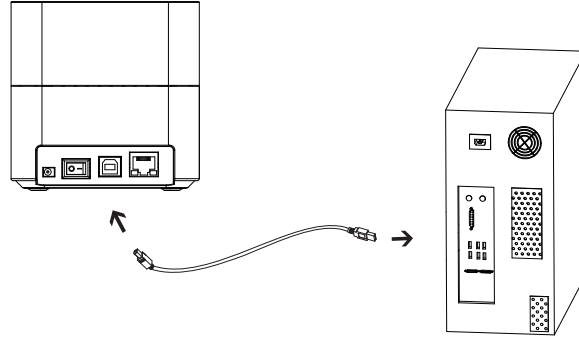

## Connect the Ethernet

Ethernet Settings (only applicable to printers that support Ethernet)

- ① Connect the printer to router (or master device) through the network cable;  
The default Ethernet setting is DHCP mode (Auto Assignment IP) ;
- ② Ethernet interface parameters can be set through utility or web (Master device and printer are under the same network segment, enter the IP assigned to in master device browser);  
Please refer to User Manual for details.

⚠ Note: Ethernet and Wi-Fi cannot be used simultaneously and need to be switched through the utility. The printer connects to Ethernet by default if Wi-Fi parameters are not set.



www.satpcs.com

## Function Button

Label/Black Label mode:


- ① Calibration and positioning: press the function button once
- ② Print the self-test page: press and hold the function button until the green indicator flashes once
- ③ Label learning: press and hold the function button until the green indicator flashes twice
- ④ Switch mode: press and hold the function button until the green indicator flashes five times to switch label types in the following order: Label paper (green indicator) -> Continuous paper (cyan indicator) -> Black label paper (yellow indicator)

Receipt Mode:

- ① Feed the paper: press the function button once
- ② Switch mode: press and hold the function button until the green indicator flashes five times to switch label types in the following order: Label paper (green indicator) -> Continuous paper (cyan indicator) -> Black label paper (yellow indicator)

## Connect the Power

1. Make sure the printer's power switch is in the "off" position.
2. Connect the power adapter to the printer and the power cord.
3. Plug the other side of the power cord into the socket outlet.

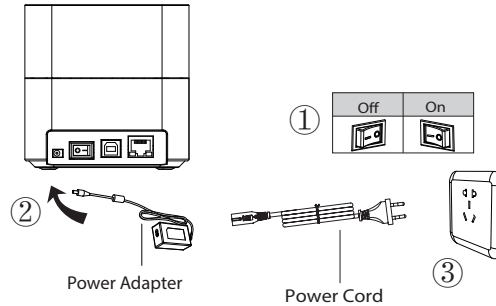

## Connect the Wi-Fi

Wi-Fi Settings (only applicable to printers that support Wi-Fi)

Printer WiFi factory default is AP mode with IP address "192.168.1.1", SSID "Model\_AP-XXXX" (XXXX is the last four digits of serial number) and password "12345678".  
After the PC or mobile phone is connected with printer successfully, users can do some parameter settings through utility tool.  
Please refer to User Manual for details.

## Connect the Bluetooth

Bluetooth Connection (only applicable to printers that support Bluetooth)

Use with the Herelabel Application

BT Name: Model-XXXX (X means the last four digits of the BT address)

Scan the code to download the Herelabel application



## Specifications

Print Mode	Label/Black Label Mode	Receipt Mode
Label Width	20mm-60mm	
Roll Paper Diameter	Max 80mm	Max 70mm
Label Type	Label paper, Black label paper	Continuous paper
Print Speed	76mm/s (203dpi)	100mm/s (203dpi)
Print Resolution	203dpi	
Operation Environment	0°C-40°C	
Output	DC 9V/2A	